

**LG-Ericsson TSP
(ip-LDK, iPECS)
User Guide**

Issue 4.1Ac



REVISION HISTORY

Version	Date	Description of Change	S/W Version
Issue 3.7Aa	SEP 12, 2007	Initial Release	
Issue 4.0Aa	JUN 27, 2009	Add iPECS-50A/50B/Micro/1200 Add iPECS-MG 100/300	D.0Ac
Issue 4.0Ab	AUG 14, 2009	Add iPECS, VM, Dial Pad Feature	
Issue 4.1Aa	APR 02, 2010	Add 64 bit OS/Machine	D.1Aa
Issue 4.1Ab	AUG 24, 2010	Company Name Change	D.1Ab
Issue 4.1Ac	JUN 08, 2011	Add iPECS-CM	D.1Bj

CONTENTS

About This Manual.....	3
Audience	3
Associated Documentation.....	3
1. Introduction.....	4
1.1 What is the TAPI Application and LG-Ericsson TSP	4
1.2 Enabling the TAPI Applications to use LG-Ericsson system.....	4
2. Hardware/Software Requirements	6
2.1 Computer Requirements	6
2.2 Key Telephone systems Requirement.....	6
3. LG-Ericsson TSP Installation & Configuration	7
3.1 Installation Procedure	7
4. 1st party connection	12
4.1 ipLDK-20/60/Nexer/Aria SOHO	12
4.2 ipLDK-50/100/300/600.....	15
4.3 iPECS-LIK, MG	17
5. 3rd party connection	19
5.1 System Configurations	19
5.2 To configure LG-Ericsson TSP	20
6. Telephony Server Configurations.....	21
6.1 To enable or disable a telephony server	21
6.2 To assign a telephony user to a line or phone	23
6.3 To remove users from telephony lines or phones	24
7. Client Computer Configurations.....	25
7.1 To specify telephony servers on a client computer	25
7.2 Client disable from telephony servers	25
8. Support For TAPI Functions.....	27

8.1	Line Device Functions.....	27
8.2	Phone Device Functions	46
8.3	Device Specific Messages.....	53
9.	Troubleshooting.....	63

About This Manual

This manual describes the use of LG-Ericsson' s TSP, and the TSP (Telephony Service Provider) supporting Microsoft TAPI 2.1 for telephony applications. Those applications are referenced to as the TAPI application in the remainder of this manual.

Audience

This manual is for anyone using LG-Ericsson TSP to develop TAPI applications.

Associated Documentation

ipLDK, iPECS Series Documentation

- Programming Manual for Digital Key Telephone System
- User's Guide for Digital Key Telephone

1. Introduction

1.1 What is the TAPI Application and LG-Ericsson TSP

LG-Ericsson TSP is the interface software or service provider that enables the application to access LG-Ericsson Keyphone System.

Microsoft TAPI components included in Microsoft Windows use the routines in LG-Ericsson TSP to access the system, and provide telephony functions to TAPI applications. Finally, the TAPI application can access LG-Ericsson Keyphone System through the TAPI functions and LG-Ericsson TSP routines.

The subsets of TAPI functions that LG-Ericsson TSP supports include:

- Line Device Functions
- Phone Device Functions
- Device Specific Messages

For details of these functions, refer to Chapter 8 and associated documents described before.

Note: LDKSP is the filename of the LG-Ericsson TSP.

Note: 1st party and 3rd party connection cannot be used at the same time.

1.2 Enabling the TAPI Applications to use LG-Ericsson system

There are two modes enabling the TAPI applications to be serviced through LG-Ericsson system. One is *the 3rd party mode* and the other is *the 1st party mode*.

In the 3rd party mode, referred to **Ошибка! Источник ссылки не найден.**, the TAPI application is on one of the client computers (may be Windows 2000/XP/Vista/7), which belongs to a Microsoft Windows domain serviced by the server computer (must be Windows 2000/2003/2008 Server). LG-Ericsson TSP must be installed in the server computer, and the server computer must be connected to LG-Ericsson system through the LAN. But in case of ipLDK-50/100/300/600, you can use RS-232C. The TAPI application can access LG-Ericsson system through the Telephony RSP (Remote Service Provider) on the client computer through the network. Another TAPI application can access LG-Ericsson system on another client computer.

In the 3rd party mode, the TAPI application on the client can access the line(s), which is(are) assigned to the client by the server computer.

In the 1st party mode, referred to **Ошибка! Источник ссылки не найден.**, the TAPI application is on the desktop computer (Windows 2000/XP/Vista/7), which is connected to the external CTI module or CTIU with the RS-232C port. The CTI Module/CTIU is connected to the keyset. The model names of keyset, which can be used in the 1st party mode, are LDP or LKD Scout chip (ipLDK-100/300/600).

In ipLDK-20/60/Aria Soho/Nexer systems, DKT and SLT can be used for 1st party mode using LAN connection.

In the 1st party mode, the TAPI application on the desktop computer can access only one line, which is connected to the keyset. And, a few features of the lineDevSpecific function would not be supported.

Note: iPECS-CM system does not support 1st party connection.

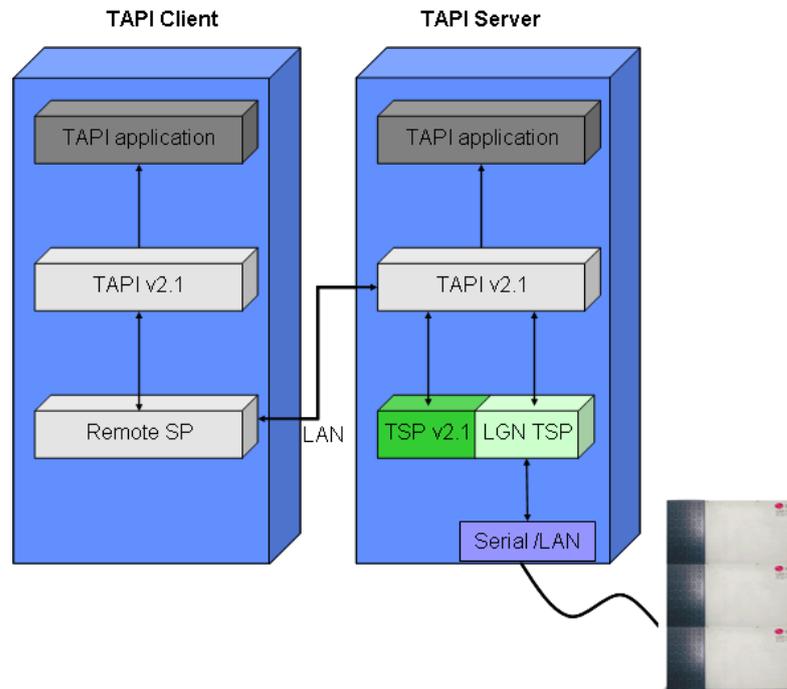


Figure 1.1 CTI Architecture of 3rd party mode

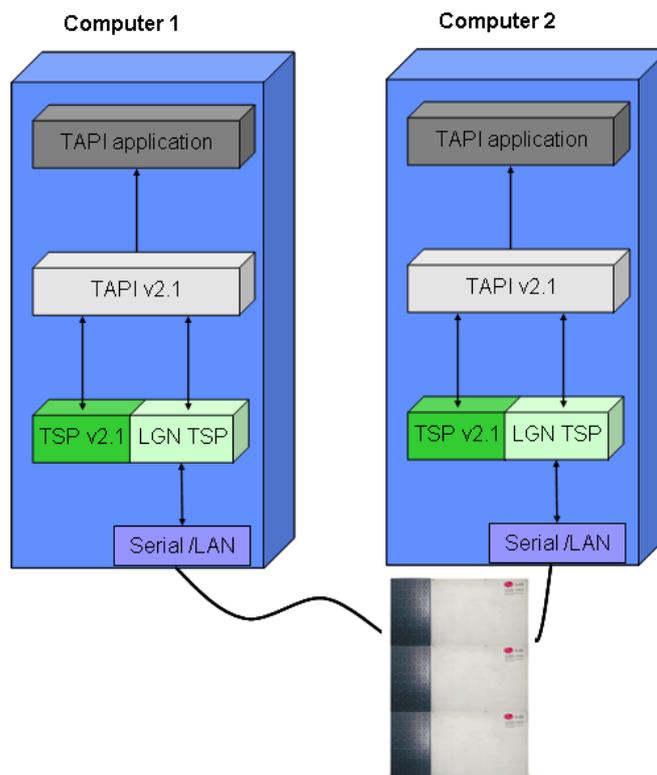


Figure 1.2 CTI Architecture of 1st party mode

2. Hardware/Software Requirements

2.1 Computer Requirements

The computer requirements are as follows:

- Server/Client (for 3rd party connection)
Telephony Server: Windows 2000/2003/2008 Server
 - CPU: Pentium III 500 MHz or later
 - RAM: 128 MB or later
 - Available Hard disk: 500 MB or later

- Client: Windows 2000 or later
 - CPU: Pentium II 200 MHz or later
 - RAM: 32MB or later
 - Available Hard disk: 200 MB or later

- Desk top (for 1st party connection)
 - CPU: Pentium II 200 MHz or later
 - RAM: 32MB or later
 - Available Hard disk: 200 MB or later

2.2 Key Telephone systems Requirement

The System requirements are as follows:

- System: Key/PBX System (ipLDK, iPECS-LIK, iPECS-MG, iPECS-CM)
- To use ipLDK-50/100/300/600 1st party connection
 - CTI Module (Model:V70, LKD keyset with Scout chip)
 - CTIU enabled LDP keyset

- To use ipLDK-20/60/Nexer/ARIA SOHO 1st party connection
 - Terminal Type
DKT, SLT, WKT (GDC-345H or later, Middleware: 1.0I or later)
 - You need 1st party lock key or ez Phone lock key.


- To use 3rd party connection (ipLDK, iPECS-LIK, iPECS-MG, iPECS-CM)
 - Terminal Type
DKT, SLT, WKT, LIP (GDC-345H or later, Middleware: 1.0I or later)
 - You need 3rd party lock key

- For ipLDK-50/100, ASMU is needed.


3. LG-Ericsson TSP Installation & Configuration

3.1 Installation Procedure


1. Run Setup.exe in LG-Ericsson TSP install version.

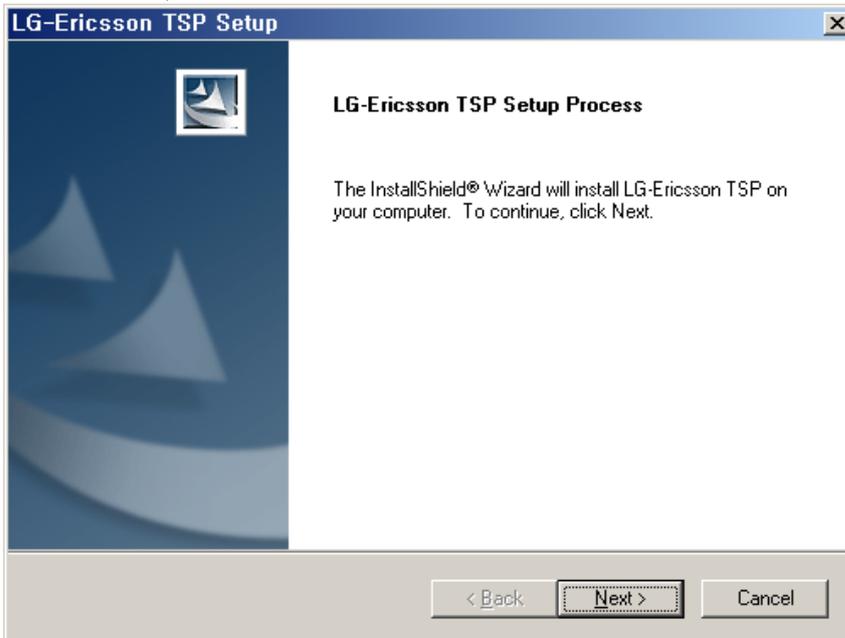


2. Click [Next] button.

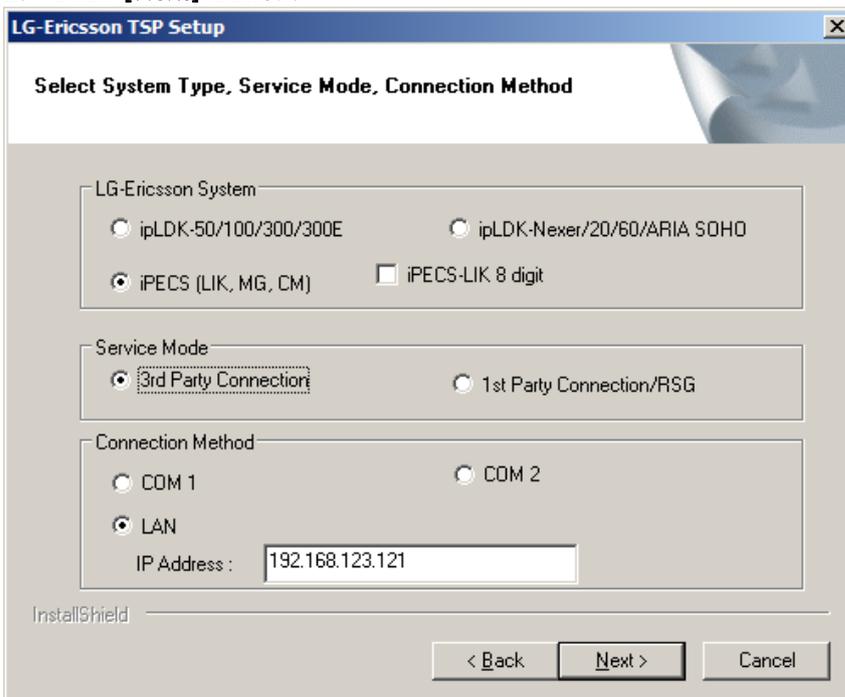

3. You need to insert Station Number and its password for 1st party connection of iPECS-LIK, ipLDK-60 and Aria Soho IP systems.

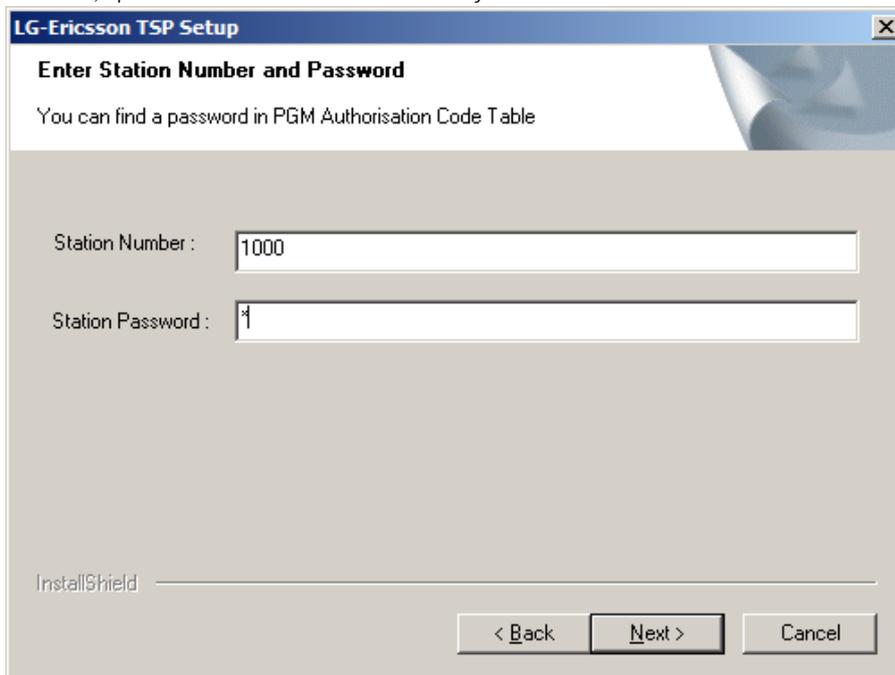


4. Select each item. When you select LAN connection, you should insert IP address of LG-Ericsson system as above.

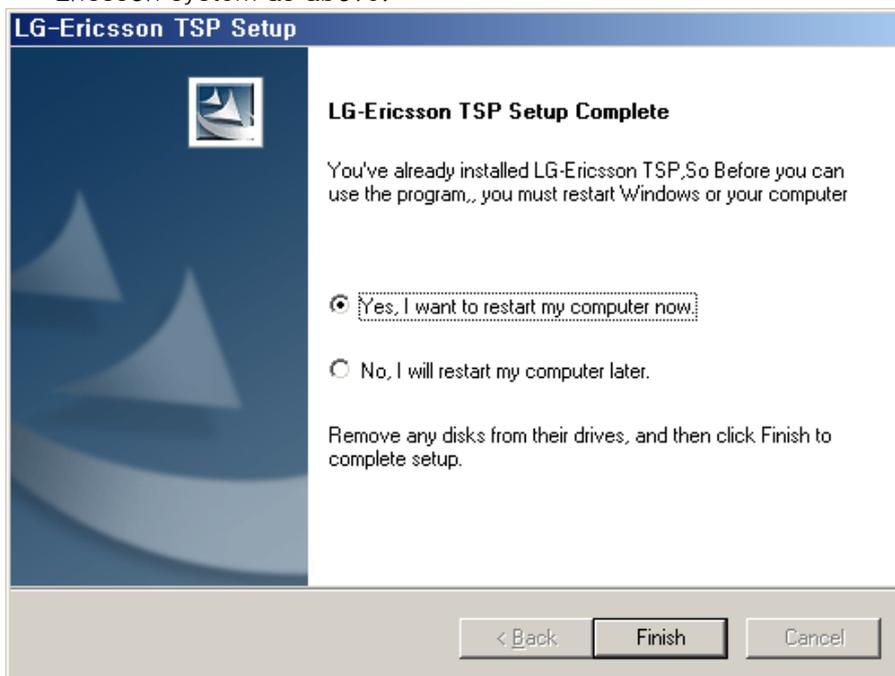


5. Restart your computer to connect between LG-Ericsson TSP and LG-Ericsson system.
6. You can change the LG-Ericsson TSP configurations as following


7. Open [Phone and Modem Options] in Control Panel.

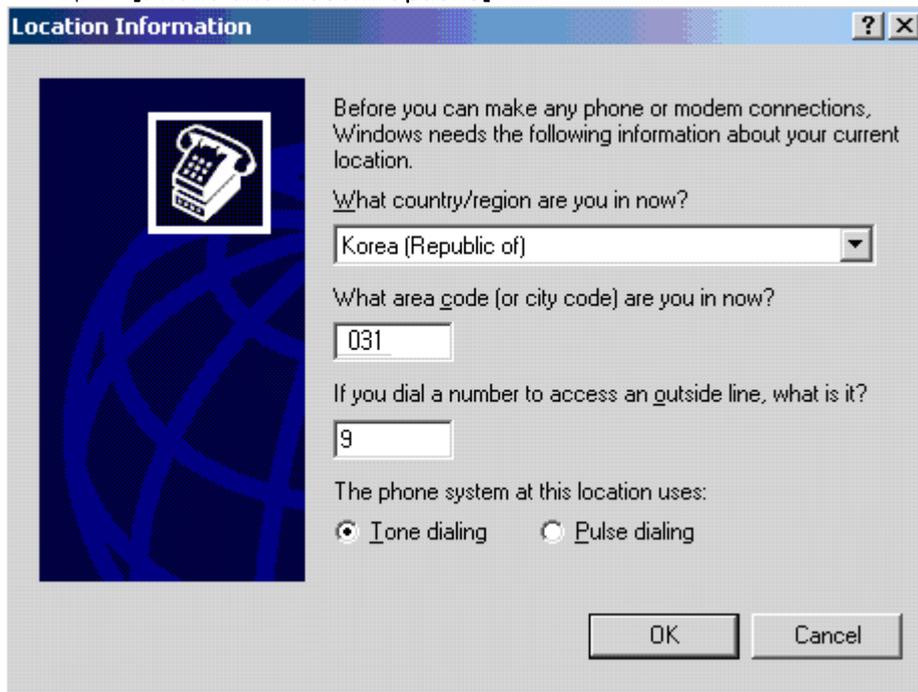


- Select country/region, insert area code and outside dial number.

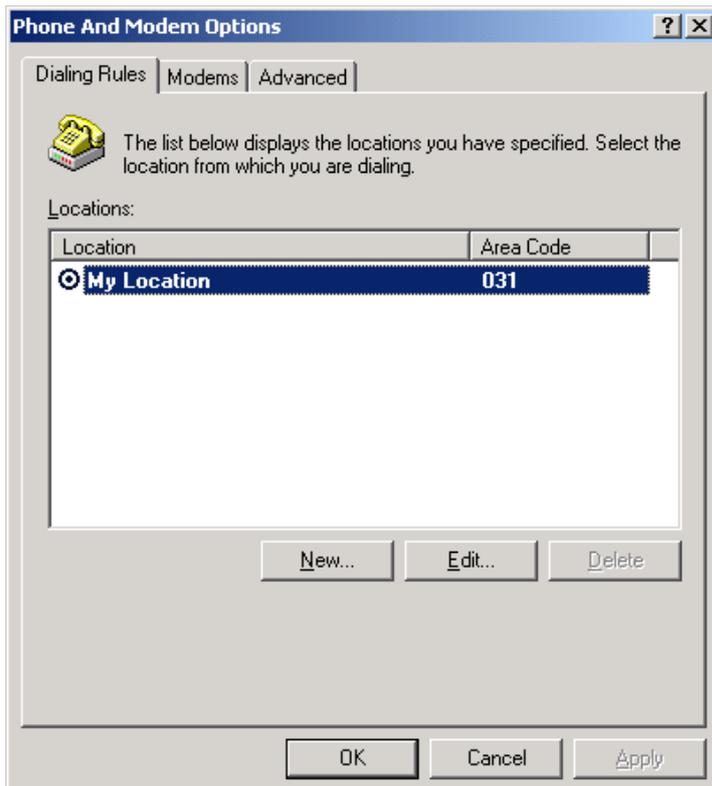


8. On the [Advanced] tab under Providers, click [Telephony Service Provider for LG-Ericsson System].

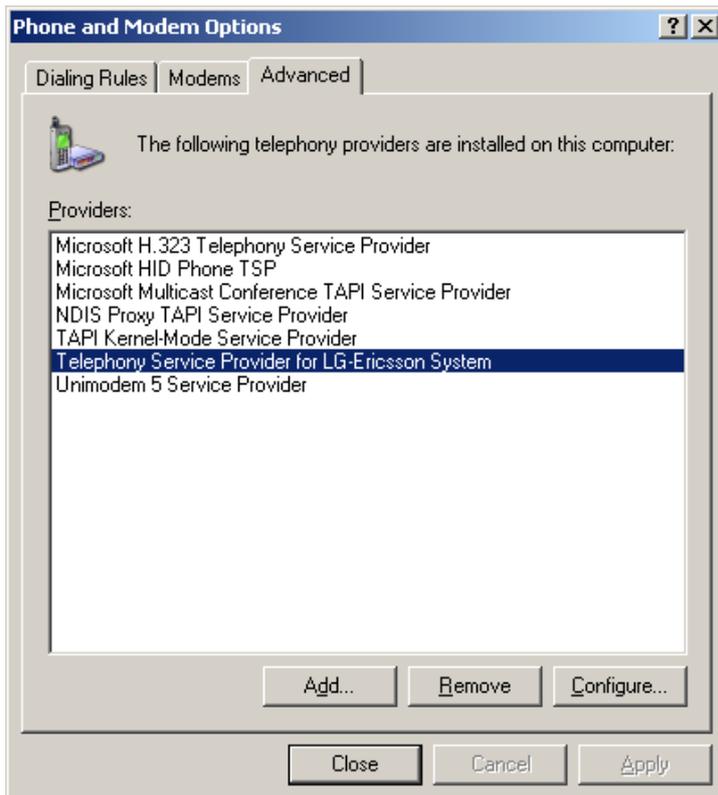

9. Click [Configure...].

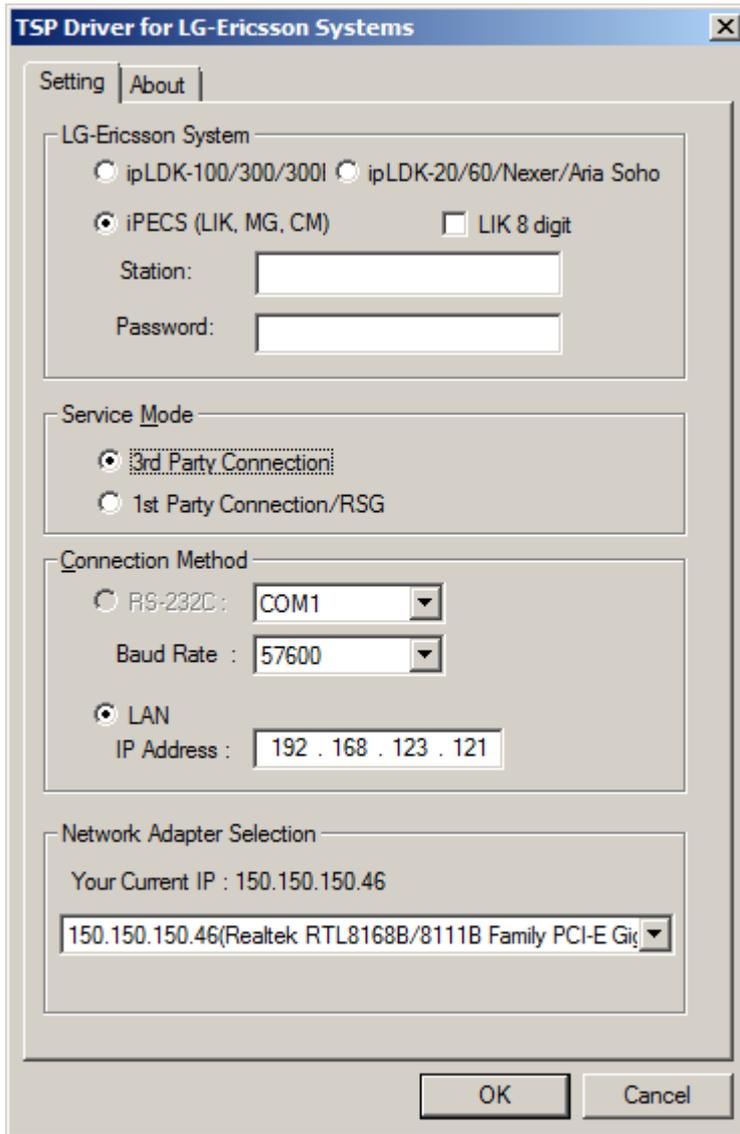

10. You can change LG-Ericsson TSP configurations in this dialog.

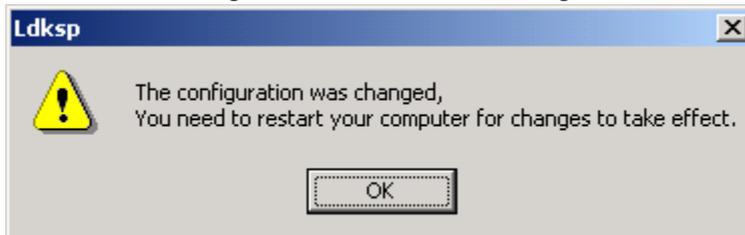


11. If the configurations were changed, you should restart your computer to take effect.

4. 1st party connection

A computer is communicating with ipLDK system directly. You should install LG-Ericsson TSP on your local computer.


4.1 ipLDK-20/60/Nexer/Aria SOHO

4.1.1. System configurations

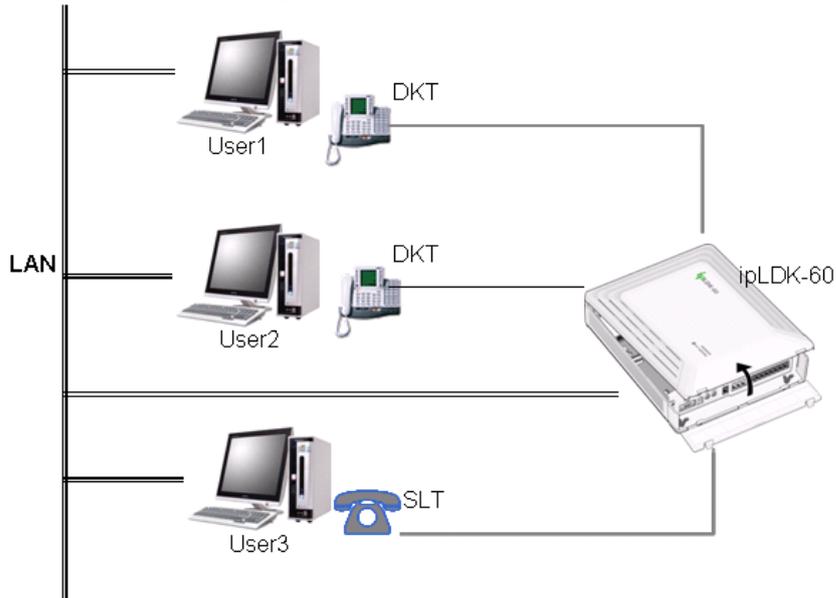


4.1.2. To assign a user to a line

1. LG-Ericsson TSP uses ID and Password of the TSP dialog box.
 - ipLDK-60 USA: US88P-C.8Ia or later.
 - ipLDK-60 STD: GS88P-C.1Ib or later.
 - Aria Soho IP: GS68P-C.8Fd or later.
2. If the MPB version is lower than above, In PGM 126, a user should type a client IP address in Edit box, click **[Update]** button.

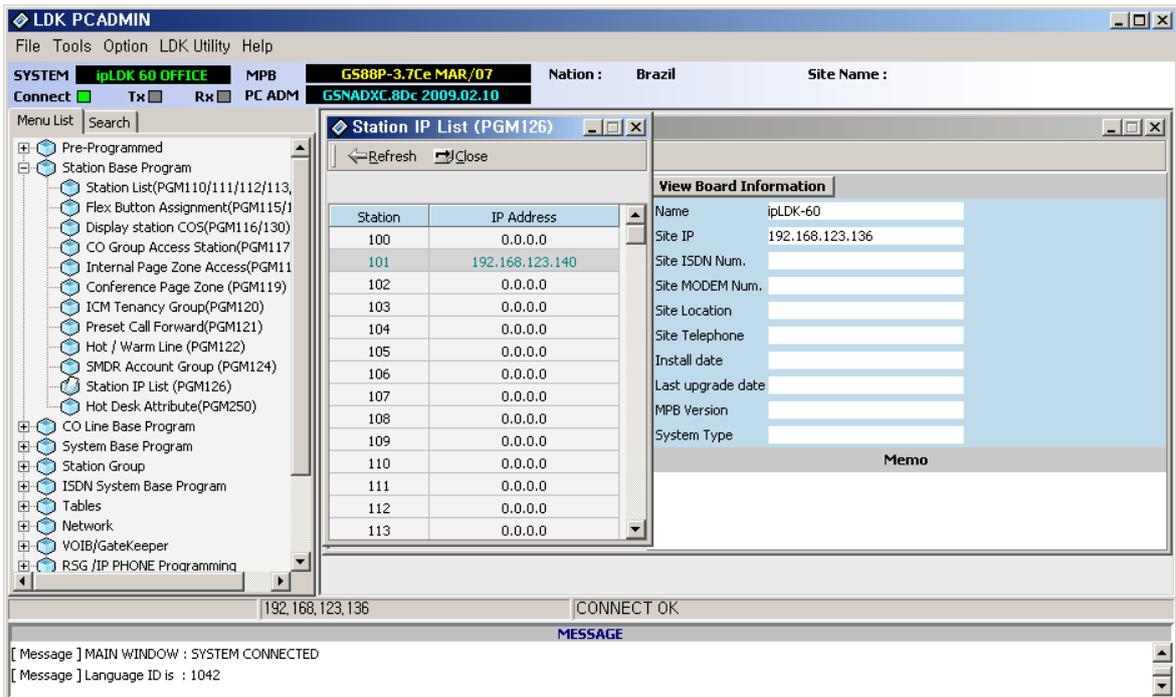

4.1.3. To configure LG-Ericsson TSP


1. Verify LG-Ericsson TSP configurations.

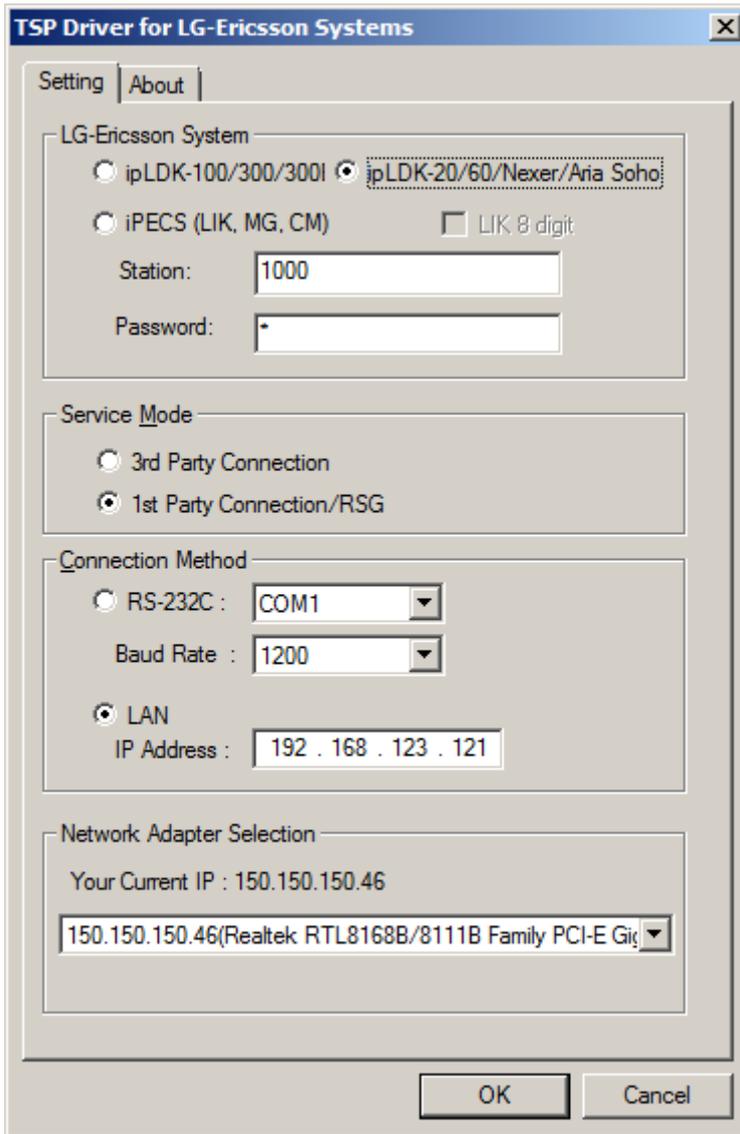

- Verify if ipLDK-20/60/Nexer/Aria Soho is selected.
- Verify if Station Number and Password are correct.
- Verify if 1st party Connection/RSG in Service Mode is selected.
- Verify if LAN is selected, and IP address of system is correct.

4.2 ipLDK-50/100/300/600

4.2.1. System configurations

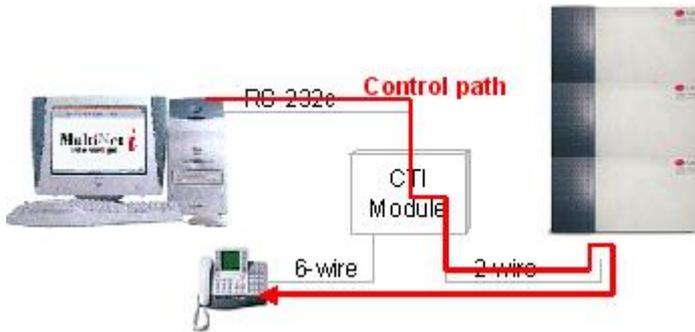

[Figure, How to use CTI Module]




[Figure, How to use CTIU enabled keyset]

- In case of using CTI module, CTI module (Model: V70) is connected to LKD with Scout chip.
- CTIU enabled LDP keyset is available.

4.2.2. To configure LG-Ericsson TSP


1. Verify LG-Ericsson TSP configurations

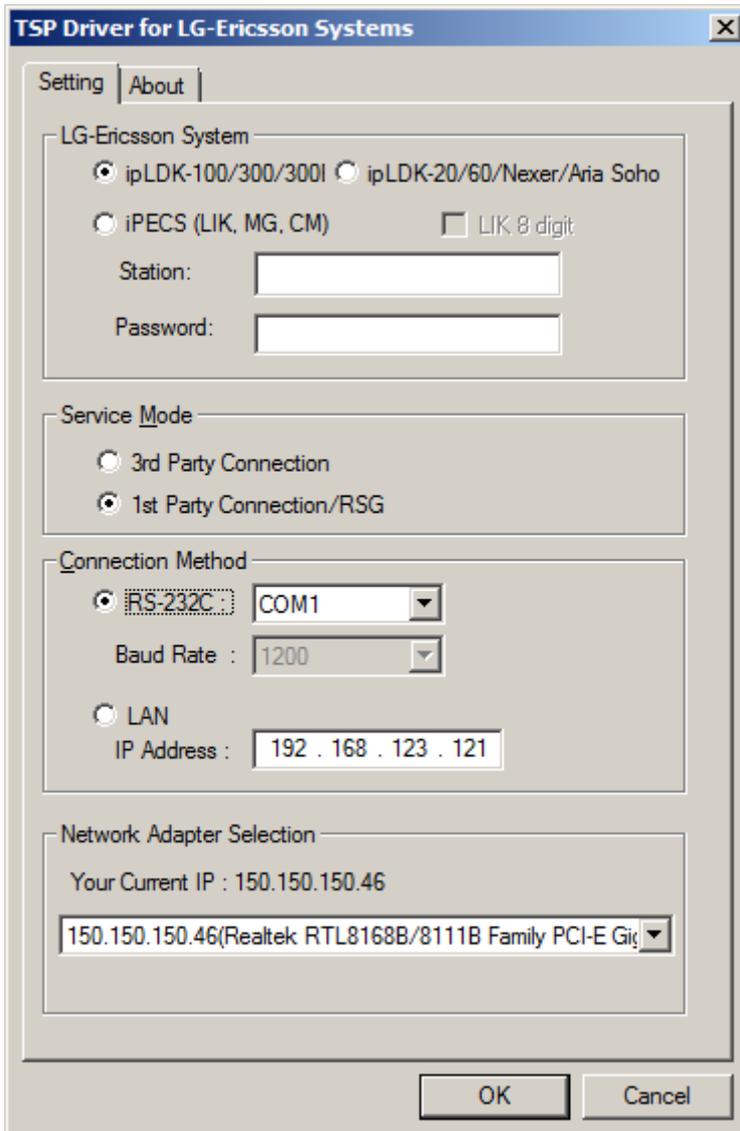

- Verify if ipLDK-50/100/300/300E is selected in LG-Ericsson System.
- Station number and its password are not used.
- Verify if 1st party Connection/RSG is selected in Service Mode
- Verify if serial number is correct, In case of RSG, LAN connection is available.

4.3 iPECS-LIK, MG

4.3.1. System configurations

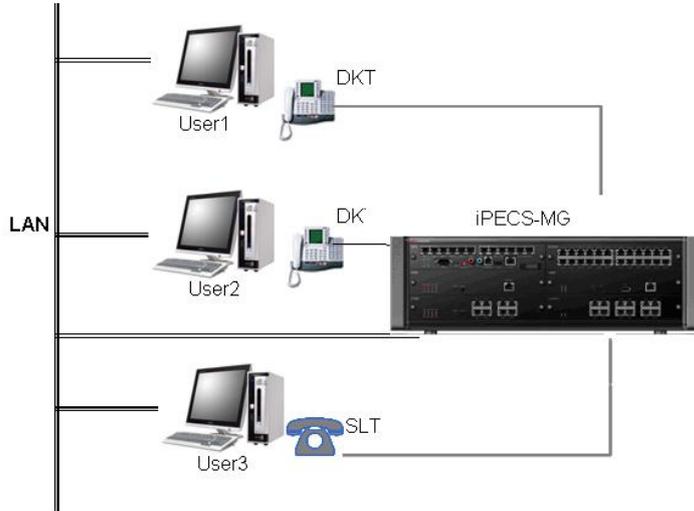

4.3.2. To assign a user to a line


1. You don't have to add any program. (iPECS-LIK 5.5cc or later)
2. If you use an iPECS-MG system, type a client IP address in Edit box, click **[Update]** button in PGM 126.

The screenshot shows the iPECS-MG Web Services interface in Microsoft Internet Explorer. The page title is "iPECS-MG Web Services - Microsoft Internet Explorer". The address bar shows "http://192.168.1.1/a_index.htm". The interface includes a navigation menu with "Administration", "S/W Upgrade", "System Management", and "Log Out". The main content area is titled "[Station CTI IP Address]" and contains a table with columns for "Check All", "Order", "Station Number", and "IP Address".

Check All	Order	Station Number	IP Address
<input checked="" type="checkbox"/>	1	100	192.168.1.10
<input type="checkbox"/>	2	101	0.0.0.0
<input type="checkbox"/>	3	102	0.0.0.0
<input type="checkbox"/>	4	103	0.0.0.0
<input type="checkbox"/>	5	104	0.0.0.0
<input type="checkbox"/>	6	105	0.0.0.0
<input type="checkbox"/>	7	106	0.0.0.0

4.3.3. To configure a LG-Ericsson TSP

1. Verify LG-Ericsson TSP configurations.

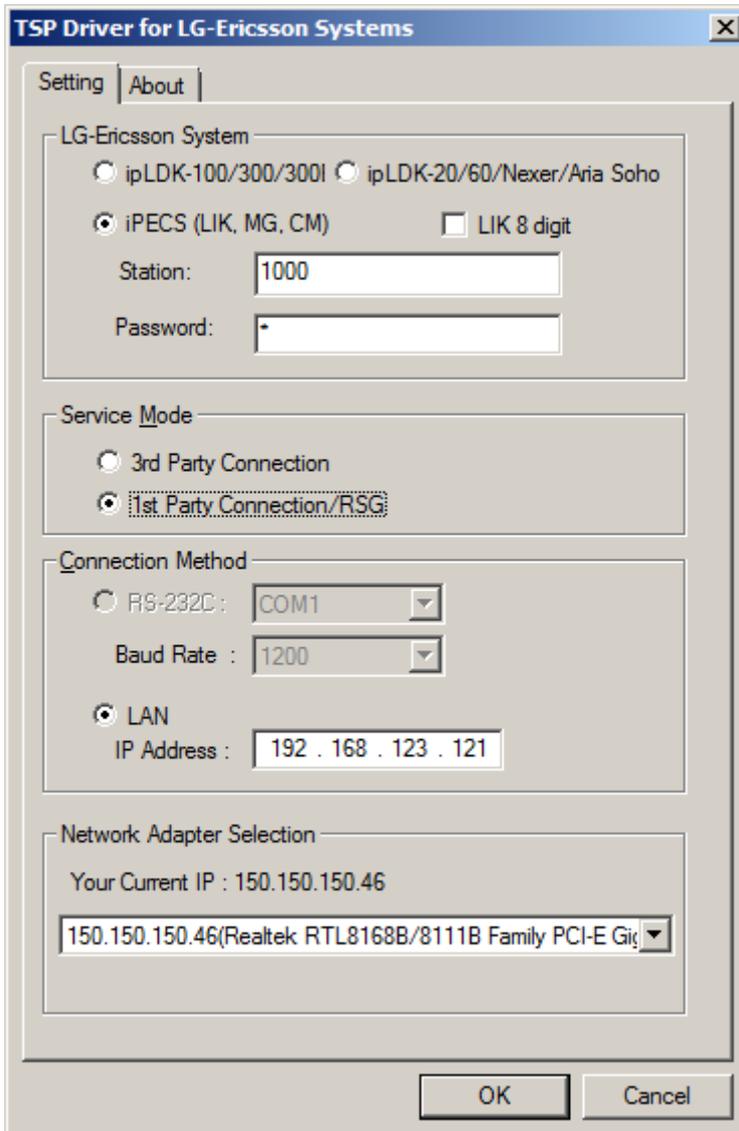


- Verify if iPECS (LIK, MG, CM) is selected.
- Verify if station number and its password are correct.
- Verify if 1st party Connection/RSG is selected in Service Mode.
- Verify if LAN is selected, and IP address of system is correct in Connection Method.

5. 3rd party connection


For 3rd party connection, you need a Server computer (Windows 2000/2003/2008 Server). You should install LG-Ericsson TSP on Server computer. In client PC, TAPI Application is communicating with its server through RSP (Remote Service Provider).

5.1 System Configurations

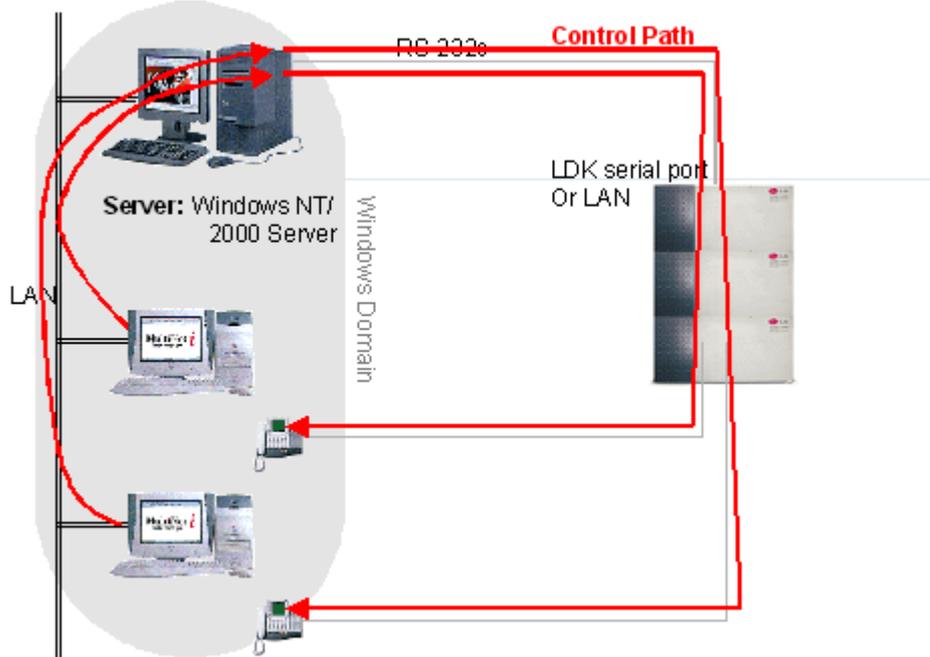

5.2 To configure LG-Ericsson TSP

1. Verify LG-Ericsson TSP configurations

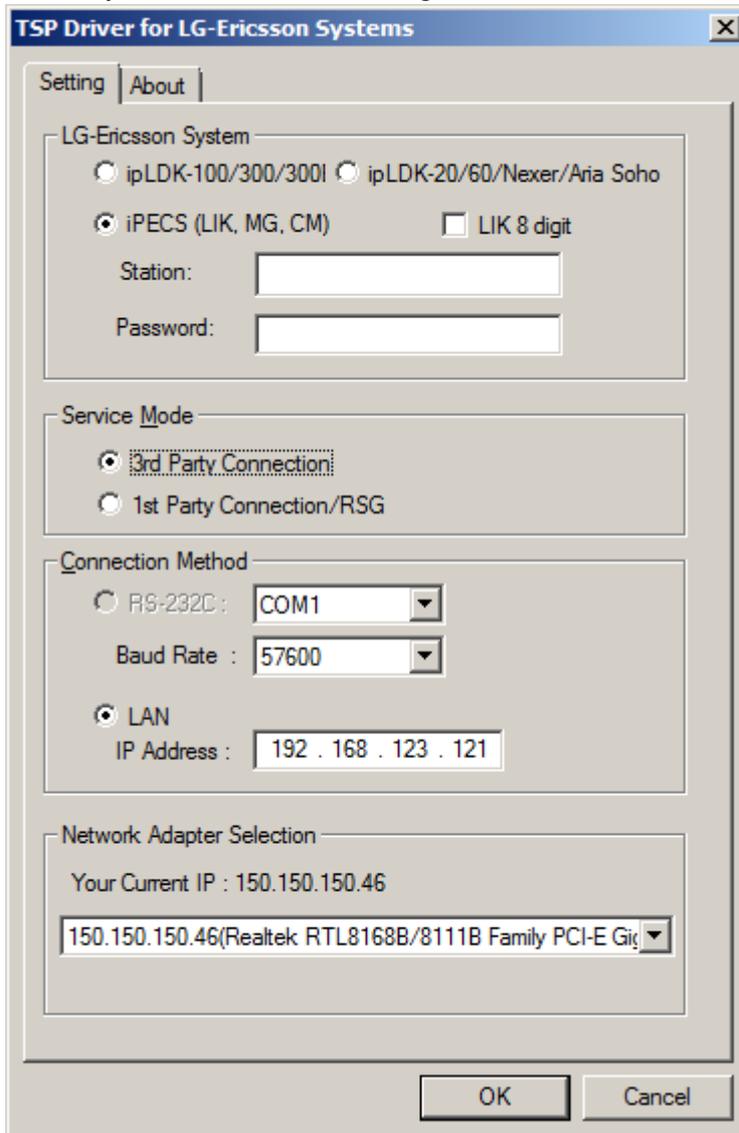


- Verify if the kind of system is correct.
- Verify if 3rd party connection is selected.
- In case of ipLDK-50/100/300/300E and ipLDK-60, you can use anyone of connection Method. But in case of the others, only LAN connection is available.

6. Telephony Server Configurations

6.1 To enable or disable a telephony server

Windows 2000/2003/2008 Server


- 1) Open **Telephony**

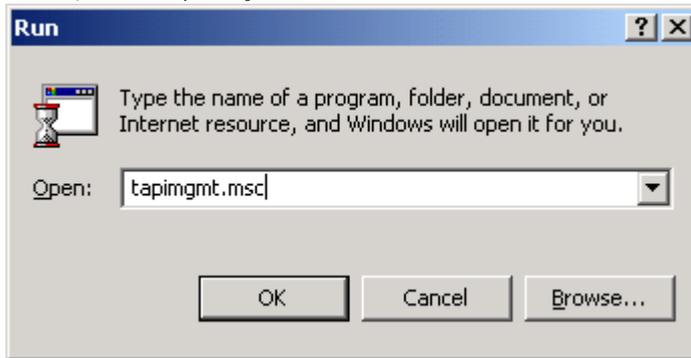

- To open **Telephony** on Windows 2000/2003/2008 Server, click **Start**, click **Run**, and then type **tapimgmt.msc**.

- 2) In the console tree, click the server you want to manage.

- 3) In the **Action** menu, click **Properties**.

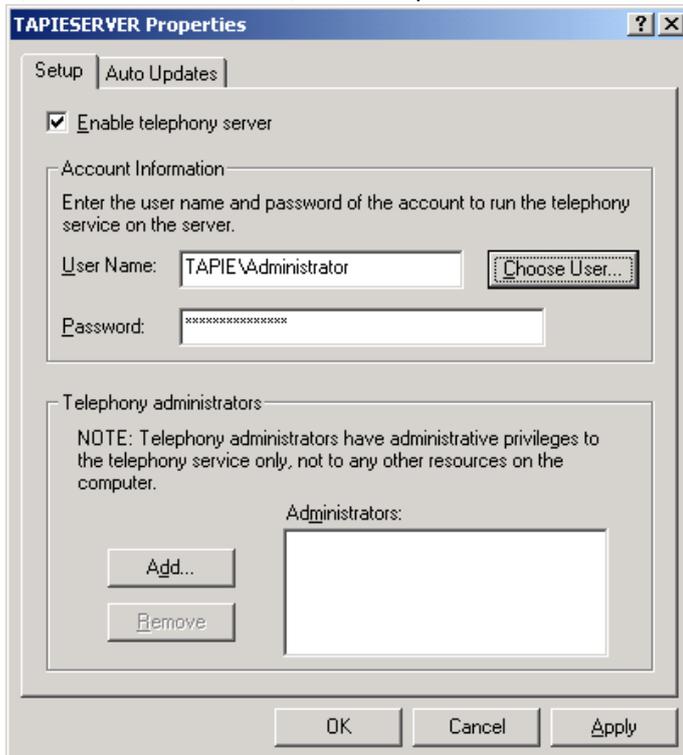

- 4) On the **Setup** tab, select the **Enable telephony server** check box to enable the server or clear the check box to disable the server.
- 5) When you enable the server, specify a logon account under **Account Information**. It must be a member of the Administrators group on the server, and also be in the


same domain as the server or in a domain that has a two-way trust relationship with the domain containing the server.

This procedure changes whether clients can use the telephony devices on the server. Changes take effect the next time the system attempts to start the TAPI service.

If the **Enable telephony server** check box is unavailable, you need to start the Telephony service first. To manage the Telephony service, you must be a telephony administrator on the server or logged on as an administrator of the server.

6.2 To assign a telephony user to a line or phone Windows 2000/2003/2008 Server

- 1) Open **Telephony**
- 2) In the console tree, click **Telephony Service Provider for LG-Ericsson System**.

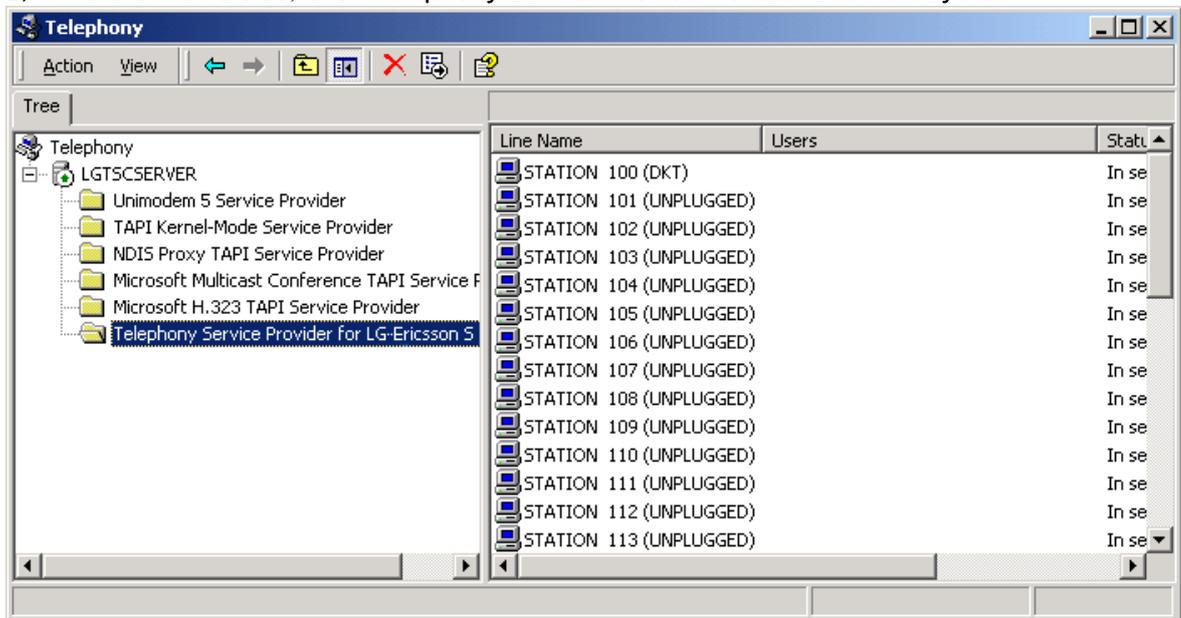

- 3) In the details pane, under **Line Name** or **Phone Name**, click the line or phone.
- 4) In the **Action** menu, click **Edit Users**, and then click **Add**.
- 5) In **Look in**, click the domain containing the user.
- 6) In the list, select the user, and then click **Add**.

This procedure permits TAPI client programs run by the user to use the line or phone on the server. A user added for a phone or line must be in the same domain as the TAPI server or in a domain that has a two-way trust relationship with the domain containing the server. Before a user can use the telephony line or phone, the TAPI server must be specified on the client computer.

6.3 To remove users from telephony lines or phones

Windows 2000/2003/2008 Server

- 1) Open Telephony.
- 2) In the console tree, click **Telephony Service Provider for LG-Ericsson System**.
- 3) In the details pane, under **Line Name** or **Phone Name**, click the line or phone.
- 4) In the **Action** menu, click **Edit Users**.
- 5) In **Assigned Users**, click a user, and then click **Remove**.

After you perform this procedure, TAPI client programs run by the user will be unable to use the line or phone on the TAPI server.

7. Client Computer Configurations

7.1 To specify telephony servers on a client computer

Windows 2000/XP/Vista/7

- 1) Open a **Command Prompt** window.
- 2) Type **Tcmsetup /c server1 server2...**.

To open a Command Prompt window, click **Start**, point to **Programs**, point to **Accessories**, and then click **Command Prompt**.

The TAPI client is installed with the Microsoft Windows 2000 operating system, but you need to perform this procedure to specify servers for the client. The client must be in the same domain as the server or in a fully trusted domain.

You must log on to the client as an administrator to perform this command. If you are logged on to a computer in the Users or Power Users group, you can use the **runas** command to run **tcmsetup** as an administrator, for example:

- `runas /user:mydomainWmyname " tcmsetup /c servername"`

You may have to restart the Telephony service for this change to take effect.

When you use Windows Server 2003, the following service pack should be installed on a client computer.


- Windows 2000 Professional: Service Pack 5 or later.
- Windows XP Home: Service Pack 2 or later.
- Windows XP Professional: Service Pack 2 or later.

After you complete this procedure, you need to specify a TAPI server on the client. To make the telephony resources on the server available to the client users, the server administrator needs to assign the users to telephones or lines on the server. Users must log onto a valid domain account.

A Windows 95 TAPI client must be upgraded to TAPI2.1 to use the TAPI services provided by a Windows 2000 TAPI server.

7.2 Client disable from telephony servers

- 1) Open a **Command Prompt** window.

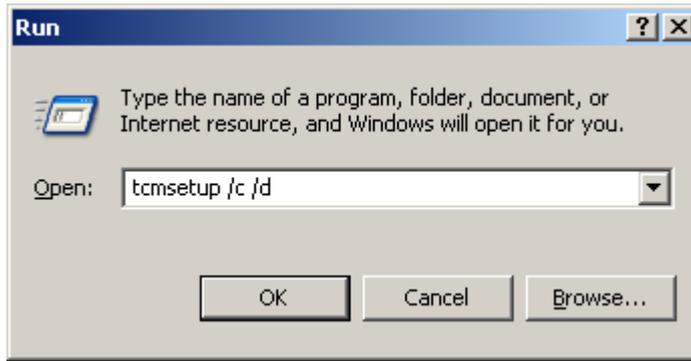

- tcmsetup /c /d

Client user cannot see the lines or phones.

8. Support For TAPI Functions

8.1 Line Device Functions

The following Sections describe TAPI Line Device functions supported by LG-Ericsson TSP. For more information about TAPI functions, refer to the *Microsoft Windows Telephony Application Programmer's Guide*.

TAPI Function	LG-Ericsson TSP Support
lineAddProvider	Supported (TAPI itself).
lineAddToConference	Supported.
lineAnswer	Supported.
lineBlindTransfer	Supported.
lineClose	Supported.
lineCompleteCall	Supported.
lineCompleteTransfer	Supported.
lineConfigProvider	Supported (TAPI itself).
lineDeallocateCall	Supported (TAPI itself).
lineDevSpecific	Supported.
lineDial	Supported.
lineDrop	Supported.
lineForward	Supported.
lineGenerateDigits	Supported.
lineGetAddressCaps	Supported.
lineGetAddressID	Supported.
lineGetAddressStatus	Supported.
lineGetCallInfo	Supported.
lineGetCallStatus	Supported.
lineGetConfRelatedCalls	Supported.
lineGetCountry	Supported (TAPI itself).
lineGetDevCaps	Supported.
lineGetID	Supported.
lineGetLineDevStatus	Supported.
lineGetMessage	Supported (TAPI itself).
lineGetNewCalls	Supported.
lineGetProviderList	Supported (TAPI itself).
lineGetStatusMessages	Supported.
lineHold	Supported.
lineInitializeEx	Supported.
lineMakeCall	Supported.
lineNegotiateAPIVersion	Supported.
lineNegotiateExtVersion	Supported.
lineOpen	Supported.

TAPI Function	LG-Ericsson TSP Support
linePark	Supported.
linePickup	Supported.
linePrepareAddToConference	Supported.
lineRedirect	Supported.
lineReleaseUserUserInfo	Supported.
lineRemoveFromConference	Supported.
lineRemoveProvider	Supported (TAPI itself).
lineSendUserUserInfo	Supported.
lineSetCallData	Supported.
lineSetCallPrivilege	Supported.
lineSetStatusMessages	Supported.
lineSetupConference	Supported.
lineSetupTransfer	Supported.
lineShutdown	Supported.
lineSwapHold	Supported.
lineTranslateAddress	Supported (TAPI itself).
lineTranslateDialog	Supported (TAPI itself).
lineUncompleteCall	Supported.
lineUnhold	Supported.
lineUnpark	Supported.

The followings are more detail descriptions of LG-Ericsson supporting TAPI functions. It was referred to MSDN Library.

lineAnswer

The **lineAnswer** function answers the specified offering call. The function is completed asynchronously.

```
LONG lineAnswer(  
    HCALL hCall,  
    LPCSTR lpsUserUserInfo,  
    DWORD dwSize  
);
```

- LG-Ericsson TSP supports the user-user information in the lpsUserUserInfo.
- SLT cannot use this function.

lineCompleteCall

The **lineCompleteCall** function specifies how a call that could not be connected normally should be completed instead. The network or switch may not be able to complete a call because network resources are busy or the remote station is busy or doesn't answer. The application can request that the call be completed in one of a number of ways. The function is completed asynchronously.

```
LONG lineCompleteCall(  
    HCALL hCall,  
    LPDWORD lpdwCompletionID,  
    DWORD dwCompletionMode,  
    DWORD dwMessageID  
);
```

- **LINECALLCOMPLMODE_CALLBACK:** A user can use this completion mode when the called user does not answer or the station status of the called user is DND(Do Not Disturb)
- **LINECALLCOMPLMODE_CAMPON:** A user can use this completion mode when the station status of the called user is busy.
- **LINECALLCOMPLMODE_INTRUDE:** When the called user does not answer the call, the Attendant user can use this completion mode.
- **LINECALLCOMPLMODE_MESSAGE:** When the called user does not answer the call, the caller user leaves a voice message.

lineDevSpecific

The **lineDevSpecific** function enables service providers to provide access to features not offered by other TAPI functions. The meanings of the extensions are device specific, and taking advantage of these extensions requires the application to be fully aware of them. The function is completed asynchronously.

```
LONG lineDevSpecific(  
    HLINE hLine,  
    DWORD dwAddressID,  
    HCALL hCall,  
    LPVOID lpParams,  
    DWORD dwSize  
);
```

- dwAddressID must be zero.

LG-Ericsson TSP supports the following device-specific functions. Some features are supported only in the 3rd party mode:

- **Paging**

“ PAGE/xx...x” in the lpParams field where xx...x is:

1. INT_PAGE_Z + 2bytes: Announce your voice to the internal zone.
 - ipLDK, iPECS-LIK : INT_PAGE_Z01 ~ INT_PAGE_Z35
 - iPECS-MG : INT_PAGE_Z01 ~ INT_PAGE_Z30
 - iPECS-CM : INT_PAGE_Z00 ~ INT_PAGE_Z99
2. INT_ALL_CALL: Announce your voice to all internal zones.
 - ipLDK, iPECS (LIK, MG)
3. EXT_PAGE_Z01 + 2bytes: Announce your voice to the external zone .
 - ipLDK, iPECS-LIK : EXT_PAGE_Z01 ~ EXT_PAGE_Z03
 - iPECS-MG : EXT_PAGE_Z0
4. EXT_ALL_CALL: Announce your voice to all external zones.

- ipLDK, iPECS (LIK, MG)
- 5. ALL_CALL: Announce your voice to all external and internal zones.
 - ipLDK, iPECS (LIK, MG)
- 6. MEET_ME: Answer and connect the announcing call.
 - ipLDK, iPECS (LIK, MG)

This function can be used when the call (hCall) is in the following status.

- in an idle status
- in an dial status
- in the status of hearing a dial tone, an error tone, or a busy tone

If a wrong IpParams is transferred, or the line device does not have a page access right, or anyone is using a page function, or there is no member in the transferred page zone, the IResult actual parameter of the corresponding ASYNC_COMPLETION is LINEERR_OPERATIONFAILED. The function is completed successfully

Ex) If you want to announce your voice to all internal zones, include the following codes to your application source code. Most device-specific functions use the similar method to the following source code.

```
char IpParam[]=" PAGE/INT_ALL_CALL" ;  
lineDevSpecific( hLine, dwAddressID, hCall, (LPVOID)IpParam, sizeof(IpParam) );
```

● **DVU (Digitized Voice Unit) (ipLDK)**

“ DVU/xx···x” in the IpParams field where xx···x is:

1. DATE; voice announcement of the date and the time.
2. STANO; voice announcement of the number of the station
3. OUTMSG_REC; record customer message
4. OUTMSG_DEL; delete customer message
5. OUTMSG_PLAY; play customer message
6. STA_STATUS; voice announcement of the following information of the station
 - Station Number
 - ICM Signaling Mode
 - Number of Message Waiting
 - Wake-up Time
 - DND state
 - Forwarded to other station
 - Forwarded to Speed Bin
 - Station COS X
7. PAGEMSG_REC; record page announcement
8. PAGEMSG_DEL; delete page announcement
9. PAGEMSG_PLAY; play page announcement
10. MSGWAIT_PLAY; play the message queued
11. MSGWAIT_DEL; delete the current message
12. MSGWAIT_PLAY_NEXT; play next message queued
13. MSGWIAT_REW: rewind the message due to admin setting.

14. MSGWAIT_ADD: add voice message.
15. MSGWAIT_CALLBACK: With CLI, make call to an external.
16. FORWARD_UNCOND: set incoming call to forward to DVU unconditionally.
17. FORWARD_BUSY: set incoming call to forward to DVU when It is busy.
18. FORWARD_NOANSW: set incoming call to forward to DVU when it is no answer
19. FORWARD_BUSYNA: set incoming call to forward to DVU when it is busy and no answer.


This function with lpParams not related to Message-waiting can be used in an idle status or in the status of hearing a dial tone. This function with lpParams of MSGWAIT_PLAY can be used in an idle status or the status of hearing a dial tone. If the application uses this when hearing a DVU message, the message will be replayed. If a wrong lpParams is transferred, or the line device does not have a DVU access right, or DVU board is not installed, or there is not available channel, or memory is insufficient, the IResult actual parameter of the corresponding ASYNC_COMPLETION is LINEERR_OPERATIONFAILED.

- **DVU (Digitized Voice Unit) (iPECS-LIK, MG)**

“ DVU/xx···x” in the lpParams field where xx···x is:

1. DATE; voice announcement of the date and the time.
2. STANO; voice announcement of the number of the station
3. STA_STATUS; voice announcement of the following information of the station
 - Station Number
 - ICM Signaling Mode
 - Number of Message Waiting
 - Wake-up Time
 - DND state
 - Forwarded to other station
 - Forwarded to Speed Bin
 - Station COS X
4. ENTER; a user listens to “ Enter Password” message.
5. ENTER/xxx···xx; “ xxx···xx” is password. “ A user listens to “ You have one new message.” message.

To use dial pad, lineDevSpecific(“ PUSH_BTN/x”) function is used.

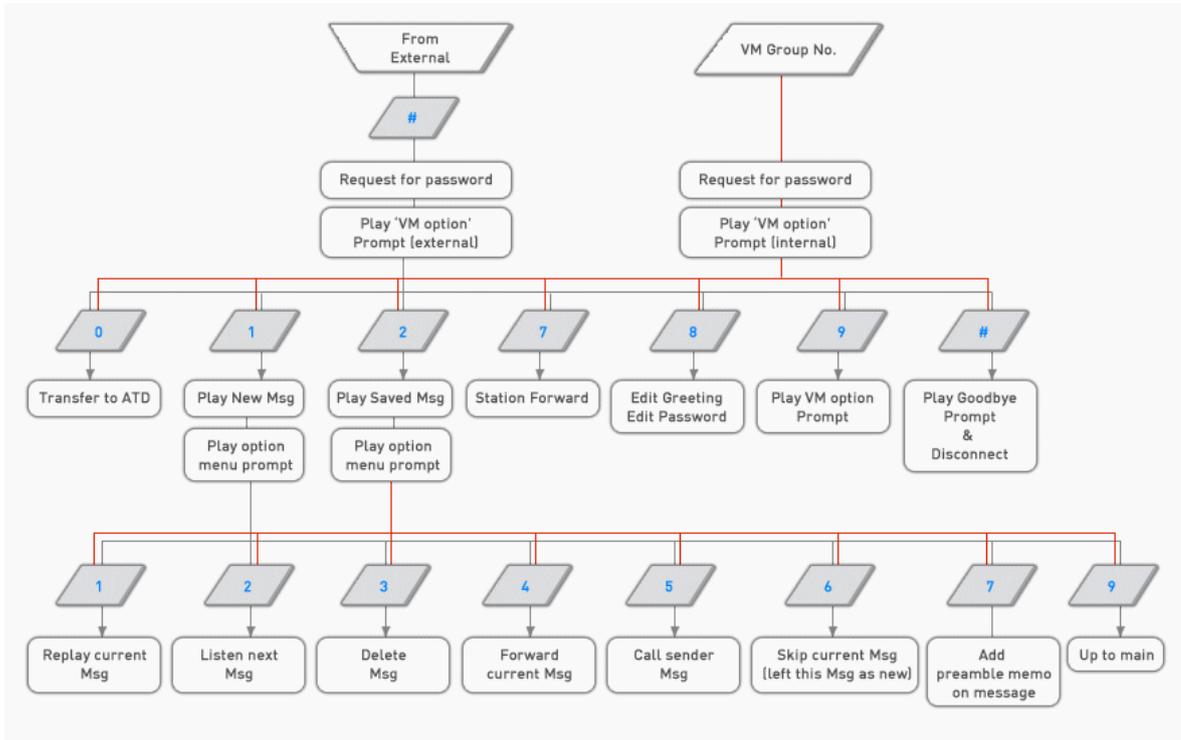

- **Get SMDR (Station Message Detail Recording) Data**

“ SMDR/x” in the IpParams field where x is:

1. B (Begin)
2. E (End)

This function enables or disables the application to receive the SMDR data. If the application uses this function with IpParams of “ SMDR/B” , the LG-Ericsson TSP will send the application the device-specific message of SMDR whenever the SMDR data occurs from ipLDK system, and then, you can get the SMDR data using **lineGetAddressStatus** function. If the application doesn't want to receive any SMDR data from LDK, use this function with IpParams of “ SMDR/E” .

Note: ipLDK 3rd party mode only

- **Get Changed Station Status**

“ STA_STATUS/x” in the IpParams field where x is:

1. B (Begin)
2. E (End)

This function enables or disables the application to receive the changed station status data. If the application uses this function with IpParams of “ STA_STATUS/B” , the LG-Ericsson TSP will send the application the device-specific message whenever any stations' status is changed. The message will have the physical number of the station and the changed status data in its parameters. Refer to LINE_DEVSPECIFIC message of the status. If the application doesn't want to receive any station status data from LG-Ericsson TSP, use this function with IpParams of “ STA_STATUS/E” .

The application can monitor the status changing of any station connected to the ipLDK system, even if the line of a station doesn't be open by the application.

Note: ipLDK-50/100/300/600 1st party does not support this feature.

- **Get Changed CO Line Status**

“ COL_STATUS/x” in the IpParams field where x is:

1. B (Begin)
2. E (End)

This function enables or disables the application to receive the CO line status data. If the application uses this function with IpParams of “ COL_STATUS/B” , the LG-Ericsson TSP will send the application the device-specific message whenever the CO line status is changed. The message will have the physical number of the CO line and the changed status data in its parameters. Refer to LINE_DEVSPECIFIC message of the status. If the application doesn't want to receive any CO line status data from LG-Ericsson TSP, use this function with IpParams of “ COL_STATUS/E” .

The application can monitor the status changing of any CO line connected to the system.

Note: *ipLDK-50/100/300/600 1st party does not support this feature.*

Note: *iPECS-CM does not support*

- **Get All Station Status**

“ ALL_STA_STATUS” in the IpParams field

This function can tell the application the status of all stations. The status is described in 0 Device Specific Data Format. After the function is completed asynchronously, the LINE_DEVSPECIFIC message is sent to the application. Then, the application can get the status data using **lineGetAddressStatus** function. Refer to LINE_DEVSPECIFIC message and **lineGetAddressStatus** function.

The application can get the status of any station connected to the system, even if the line of a station doesn't be open by the application.

Note: *ipLDK-50/100/300/600 1st party does not support this feature.*

- **Get All CO Line Status**

“ ALL_COL_STATUS” in the IpParams field

This function can tell the application the status of all CO lines. The status is described in 0 Device Specific Data Format. After the function is completed asynchronously, the LINE_DEVSPECIFIC message is sent to the application. Then, the application can get the status data using **lineGetAddressStatus** function. Refer to LINE_DEVSPECIFIC message and **lineGetAddressStatus** function.

The application can get the status of any CO line connected to the system.

Note: *ipLDK-50/100/300/600 1st party does not support this feature.*

Note: *iPECS-CM does not support this feature.*

- **Get System Time**

“ GETTIME” in the IpParams field

This function can tell the application current LG-Ericsson TSP server time. After the function is completed asynchronously, the LINE_DEVSPECIFIC message is sent to the callback function. Refer to LINE_DEVSPECIFIC.

Note: *3rd party mode only*

- **Set CO Line Hold Type**

“ CO_HOLD/xxx” in the IpParams field where xxx is:

1. EXC(Exclusive Hold)
2. SYS(System Hold)

This function sets the holding type of CO line. If an application holds a CO line using **lineHold**, the CO line will be held with the type that the application sets using this function. The default type of holding is **Exclusive Hold**.

Note: *iPECS-MG and iPECS-CM do not support this feature.*

- **Get Station’ s Logical Number**

“ STA_NUM/xxx” in the IpParams field where “ xxx” is the physical number of the station (eg. 001, 010, 100)

This function asks LG-Ericsson TSP to return the logical number (station number) of the station. After asynchronous successful response of this function, the application will receive the LINE_DEVSPECIFIC message, which contains the physical number and the logical number of the station in its parameters. Refer to LINE_DEVSPECIFIC.

Note: *ipLDK-50/100/300/600 1st party does not support this feature.*

- **Get All Stations’ Logical Numbers**

“ ALL_STA_NUM” in the IpParams field

This function asks LG-Ericsson TSP to return the logical numbers (station number) of all stations. After asynchronous successful response of this function, the application will receive the LINE_DEVSPECIFIC message. Then, the application can get the logical numbers of all stations by using **lineGetAddressStatus** function. Refer to LINE_DEVSPECIFIC message and **lineGetAddressStatus** function.

Note: *ipLDK-50/100/300/600 1st party does not support this feature.*

- **Get Station Information**

“ STA_INFO/xxx” in the IpParams field where “ xxx” is the physical number of the station (eg. 001, 010, 100)

This function asks LG-Ericsson TSP to prepare to provide the information of the station, which has the physical number of “ xxx.” After asynchronous successful response of this function, the application will receive the LINE_DEVSPECIFIC message. Then, the application can get the information of the station by using **lineGetAddressStatus** function. Refer to LINE_DEVSPECIFIC message and **lineGetAddressStatus** function.

Note: *ipLDK-50/100/300/600 1st party does not support this feature.*

- **Get CO Line Information**

“ COL_INFO/xxx” in the IpParams field where “ xxx” is the physical number of the CO line (eg. 001, 010, 100)

This function asks LG-Ericsson TSP to prepare to provide the information of the CO line, which has the physical number of “ xxx.” After asynchronous successful response of this function, the application will receive the LINE_DEVSPECIFIC message. Then, the application can get the information of the station by using **lineGetAddressStatus** function. Refer to LINE_DEVSPECIFIC message and

lineGetAddressStatus function.

Note: ipLDK-50/100/300/600 1st party does not support this feature.

Note: iPECS-CM does not support

- **Get All Park Number**

“ ALL_PARK_NUM” in the lpParams field.

This function asks LG-Ericsson TSP to prepare to provide the information of all park number. After asynchronous successful response of this function, the application will receive the LINE_DEVSPECIFIC message. Then, the application can get the information of the station by using **lineGetAddressStatus** function. Refer to LINE_DEVSPECIFIC message and **lineGetAddressStatus** function.

Note: 3rd party mode only

Note: iPECS-CM does not support this feature.

- **Dummy Station Log on (ipLDK)**

“ LOGON/xxxx/yyyy” in the lpParams field where xxxx, yyyy are:.

xxxx: Station Number (3 or 4 digits)

yyyy: Password (Admin dependant).

- **Dummy Station Log on (iPECS-LIK, iPECS-CM)**

“ LOGON/xxxxyyyy” in the lpParams field where xxxx, yyyy are:.

xxxx: Station Number

yyyy: Password (Admin dependent).

- **Dummy Station Log off (ipLDK, iPECS-LIK)**

“ LOGOFF/xx···xx” in the lpParams field where xx···xx is:.

- NOCHANGE
- VMIB
- VMGROUP/yyyy, yyyy is a VM group number
- VMIB
- MOBILE
- STATION/xxxx, xxxx is a station number. Forward to Station.

- **Dummy Station Log off (iPECS-CM)**

“ LOGOFF/xx···xx” in the lpParams field where xx···xx is:.

- NOCHANGE
- STATION/xxxx, xxxx is an internal or external number.

- **UCD DND Log on/off in UCD group (ipLDK)**

“ UCD_DND_ON/xxxx” in the lpParams: Activate UCD DND.

“ UCD_DND_OFF/xxxx” in the lpParams: Deactivate UCD DND.

- xxxx is a UCD group number.

“ S_UCD_DND_ON/xxxx/yyyy” in the lpParams: Activate UCD DND by Supervisor.

“ S_UCD_DND_OFF/xxxx/yyyy” in the lpParams: Deactivate UCD DND by Supervisor.

- xxxx is a UCD group number.

- yyyy is a station number (3 or 4 digits)
- **UCD DND Log on/off in UCD group (iPECS-LIK)**
 - “ UCD_DND_ON/xxxx/y” in the IpParams: Activate UCD DND.
 - “ UCD_DND_OFF/xxxx/y” in the IpParams: Deactivate UCD DND.
 - xxxx is a UCD group number.
 - y is one of the ‘ 0~9’ , ‘ #’ , ‘ *’ .
 - “ S_UCD_DND_ON/xxxx/yyyy/z” in the IpParams: Activate UCD DND by Supervisor.
 - “ S_UCD_DND_OFF/xxxx/yyyy/z” in the IpParams: Deactivate UCD DND by Supervisor.
 - xxxx is a UCD group number.
 - yyyy is a station number (3 or 4 digits)
 - z is one of the ‘ 0~9’ , ‘ #’ , ‘ *’ .
- **Make/delete Conference Room**
 - “ CONF_ROOM/E/xxx/yyyyy” in the IpParams: Activate Conference Room.
 - “ CONF_ROOM/E/xxx/yyyyy” in the IpParams: Deactivate Conference Room.
 - xxxx is a Conference Room number.
 - yyyyy is a password.
- **Get Call ID in a ACD group (iPECS-LIK)**
 - “ CO_CALLID /xxx” in the IpParams.
 - xxxx is a ACD Group number.
- **Call Answer by Call ID (iPECS-LIK)**
 - “ CO_CALLID_ANS /xxx” in the IpParams.
 - xxxx is a Call ID number.
- **Off net Call Forward (ipLDK)**
 - “ OFFNET_FORWARD/UNCOND/Cxxxxyyy” in the IpParams.
 - “ OFFNET_FORWARD/NOANSW/Cxxxxyyy” in the IpParams.
 - “ OFFNET_FORWARD/BUSYFW/Cxxxxyyy” in the IpParams.
 - “ OFFNET_FORWARD/BUSYNA/Cxxxxyyy” in the IpParams.
 - “ OFFNET_FORWARD/UNCOND/LOOPyyy” in the IpParams.
 - “ OFFNET_FORWARD/NOANSW/LOOPyyy” in the IpParams.
 - “ OFFNET_FORWARD/BUSYFW/LOOPyyy” in the IpParams.
 - “ OFFNET_FORWARD/BUSYNA/LOOPyyy” in the IpParams.
 - OFFNET_FORWARD is functional string of Off net Call Forward.
 - UNCOND means Unconditional Off net Call Forward.
 - NOANSW means No Answer Off net Call Forward.
 - BUSYFW means Busy Off net Call Forward.
 - BUSYNA means Busy No Answer Off net Call Forward.
 - C means Individual CO Line.
 - xxx is a CO number.
 - yyy is a Speed Bin number.

- **Off net Call Forward (iPECS-LIK)**
 - “ OFFNET_FORWARD/UNCOND/yyy” in the lpParams.
 - “ OFFNET_FORWARD/NOANSW/yyy” in the lpParams.
 - “ OFFNET_FORWARD/BUSYFW/yyy” in the lpParams.
 - “ OFFNET_FORWARD/BUSYNA/yyy” in the lpParams.
 - yyy is a Speed Bin number.
 - The number of digits depends on system. (From 2 to 5 digits)
- **Push Button (Dial Pad)**
 - “ push_btn/x” in the lpParams.
 - x is a dial digit (0 ~ 9, *, #)

lineDial

The **lineDial** function dials the specified dialable number on the specified call. The function is completed asynchronously.

```
LONG lineDial(  
    HCALL hCall,  
    LPCSTR lpszDestAddress,  
    DWORD dwCountryCode  
);
```

- **Account Code**
 - “ AC/xx...x” in the lpszDestAddress field where xx...x are account code digits which are within 12 digits.
 - These digits will be included in the SMDR data record. These can be used to allocate cost or time for the call.
 - This function can be used when the call (hCall) is in the connected status.
 - Note:** *ipLDK 3rd party only*
- **CO Call (ipLDK, iPECS-LIK)**
 - “ Cxx...x” or “ @xx...x” in the lpszDestAddress field where xs are 0 through 9,*, and #. The front three xs represent CO line number and the following digits are real dialing numbers.
- **CO Call (iPECS-MG, CM)**
 - “ xx...x” in the lpszDestAddress field where xs are 0 through 9,*, and #. (CO Access Code + CO Number + real dialing numbers)
- **CO Group Call**
 - “ Gxx...x” or “ \$xx...x” in the lpszDestAddress field where xs are 0 through 9, *, and #. The front three xs represent CO line group number and the following digits are real dialing numbers.
- **CO Group Call (iPECS-MG, CM)**
 - “ xx...x” in the lpszDestAddress field where xs are 0 through 9, *, and #. (CO Group Access Code + dialing numbers)

- **Networking Call**
“ xxx” in the IpszDestAddress field where xxx is extension number or station group number.

- **Outside/Long distance Call**
“ ss…sxx…x” in the IpszDestAddress field where ss…s is the Outside Access or Long distance Access string you have described at Telephony of Control Panel in your computer, and the following digits are real dialing number. The same response, that comes out when you Dial 9(0 in some countries) and the following digits in your keyset, will come out.

- **Outside/Long distance Call (iPECS–MG, CM)**
“ ss…sxx…x” in the IpszDestAddress field where ss…s is the Outside Access and the following digits are real dialing number.

LG-Ericsson TSP ignores the value in the dwCountryCode field. Also, the following four special functions are supported:

- **Station Speed Dial (ipLDK, iPECS–LIK)**
“ SPD/xx…x” in the IpszDestAddress field where xx…x is:
 1. “ Cyyyzzz” or “ @yyyzzz” where yyy is CO number and zzz is speed dial number.
 2. “ Gyyyzzz” or “ \$yyyzzz” where yyy is CO group number and zzz is speed dial number.
 3. “ zzz” where zzz is speed dial number.(000 ~ 099)

- **Station Speed Dial (iPECS–MG, CM)**
“ SPD/xx…x” in the IpszDestAddress field where xx…x is:
 1. “ xxx” where xxx is speed dial number.(000 ~ 099)

- **System Speed Dial (ipLDK, iPECS–LIK)**
“ SPD/xx” in the IpszDestAddress field where x is:
 1. “ Cyyyzzzz” or “ @yyyzzzz” where yyy is CO line number and zzzz is system speed dial number.
 2. “ Gyyyzzzz” or “ \$yyyzzzz” where yyy is CO group number and zzzz is system speed dial number.
 3. “ zzzz” where zzzz is system speed dial number.(2000 ~ 4999)

- **System Speed Dial (iPECS–MG, CM)**
“ SPD/xxxx” in the IpszDestAddress field where x is:
 1. “ xxxx” where xxxx is system speed dial number.(2000 ~ 4999)

- **Last Number Redial(LNR) (ipLDK, iPECS-LIK)**
“ LNR/xx···x” in the IpszDestAddress field where x is:
 1. “ Cyyy” or “ @yyy” where yyy is CO line number.
 2. “ Gyyy” or “ \$yyy” where yyy is CO group number.
 3. (None)

- **Last Number Redial(LNR) (iPECS-MG, CM)**
“ LNR” in the IpszDestAddress field

- **Save Number Redial(SNR) (ipLDK, iPECS-LIK)**
“ SNR/xx···x” in the IpszDestAddress field where x is:
 1. “ Cyyy” or “ @yyy” where yyy is CO line number.
 2. “ Gyyy” or “ \$yyy” where yyy is CO group number.
 3. (None)

- **Save Number Redial(SNR) (iPECS-MG, CM)**
“ SNR” in the IpszDestAddress field

- **Make a call to a Conference Room (ipLDK, iPECS-LIK)**
“ xxx/yyyy” in the IpszDestAddress field where x is:
 1. “ xxx” is a Conference Room number.
 2. “ yyyy” is a password.

- **Make a call to a Conference Room (iPECS-MG, CM)**
“ xxxyyyyy*” in the IpszDestAddress field where x is:
 1. “ xxx” is a Conference Room number.
 2. “ yyyy” is a password.
 3. ‘ *’

lineForward

The **lineForward** function forwards calls destined for the specified address on the specified line, according to the specified forwarding instructions. When an originating address (dwAddressID) is forwarded, the specified incoming calls for that address are deflected to the other number by the switch. This function provides a combination of forward and do-not-disturb features. This function can also cancel forwarding currently in effect. The function is completed asynchronously.

```
LONG lineForward(  
    HLINE hLine,  
    DWORD bAllAddresses,  
    DWORD dwAddressID,  
    LPLINEFORWARDLIST const lpForwardList,  
    DWORD dwNumRingsNoAnswer,  
    LPHCALL lphConsultCall,  
    LPLINECALLPARAMS const lpCallParams  
);
```

- dwAddressID must be zero.
- LG-Ericsson TSP supports the following functions:

- **DND (Do Not Disturb)**
lpForwardList→ForwardList[0].dwDestAddressSize to NULL.
- **Forward all calls unconditionally.**
lpForwardList→ForwardList[0].dwForwardMode to LINEFORWARDMODE_UNCOND.
- **Forward any calls on busy.**
lpForwardList→ForwardList[0].dwForwardMode to LINEFORWARDMODE_BUSY.
- **Forward any calls on no answer.**
lpForwardList→ForwardList[0].dwForwardMode to LINEFORWARDMODE_NOANSW.
- **Forward any calls on busy/no answer.**
lpForwardList→ForwardList[0].dwForwardMode to LINEFORWARDMODE_BUSYNA.

lineGetAddressStatus

The **lineGetAddressStatus** function allows an application to query the specified address for its current status.

```
LONG lineGetAddressStatus(  
    HLINE hLine,  
    DWORD dwAddressID,  
    LPLINEADDRESSSTATUS lpAddressStatus  
);
```

In the structure of lpAddressStatus, LG-Ericsson TSP fills dwDevSpecificSize, dwDevSpecificOffset and the corresponding data field. Especially, LG-Ericsson TSP can return SMDR, All Station Status, All CO Line Status, Station Information, CO Line Information, and All Station's Numbers. If a TAPI application want to get those data, those data receiving process must be started with **lineDevSpecific** function related to those data. Whenever those data occurs, the LINE_DEVSPECIFIC message is sent to the callback function. Then, the application can get those data using this function. Refer to **lineDevSpecific** function (SMDR, All Station Status, All CO Line Status, Station Information, CO Line Information, and All Station's Number),

lineGetCallInfo

The **lineGetCallInfo** function enables an application to obtain fixed information about the specified call.

```
LONG lineGetCallInfo(  
    HCALL hCall,  
    LPLINECALLINFO lpCallInfo  
);
```

LG-Ericsson TSP fills dwCallerID, dwCallerIDName, dwCalledID, dwCalledIDName, dwConnectedID, dwConnectedIDName when proper ID and Name is received. The dwRedirectingID and dwRedirectingIDName are provided to the ringing station when the DID incoming call is forwarded from a station to another station. The dwRedirectionID and dwRedirectionIDName are unavailable.

lineMakeCall

The **lineMakeCall** function places a call on the specified line to the specified destination address. Optionally, call parameters can be specified if anything but default call setup parameters are requested. The function is completed asynchronously.

```
LONG lineMakeCall(  
    HLINE hLine,  
    LPHCALL lphCall,  
    LPCSTR lpszDestAddress,  
    DWORD dwCountryCode,  
    LPLINECALLPARAMS const lpCallParams  
);
```

LG-Ericsson TSP supports the following functions:

- **CO Call (ipLDK, iPECS-LIK)**
“ Cxx…x” or “ @xx…x” in the lpszDestAddress field where xs are 0 through 9,*, and #. The front three xs represent CO line number and the following digits are real dialing numbers.
- **CO Call (iPECS-MG, CM)**
“ xx…x” in the lpszDestAddress field where xs are 0 through 9,*, and #. (CO Access Code + CO Number + real dialing numbers)
- **CO Group Call (ipLDK, iPECS-LIK)**
“ Gxx…x” or “ \$xx…x” in the lpszDestAddress field where xs are 0 through 9, *, and #. The front three xs represent CO line group number and the following digits are real dialing numbers.
- **CO Group Call (iPECS-MG, CM)**
“ xx…x” in the lpszDestAddress field where xs are 0 through 9, *, and #. (CO Group Access Code + dialing numbers)
- **Networking Call**
“ xxx” in the lpszDestAddress field where xxx is extension number or station group number.

- **Outside/Long distance Call (ipLDK, iPECS-LIK)**
“ ss…sxx…x” in the lpszDestAddress field where ss…s is the Outside Access or Long distance Access string you have described at Telephony of Control Panel in your computer, and the following digits are real dialing number. The same response, that comes out when you Dial 9(0 in some countries) and the following digits in your keyset, will come out.
- **Outside/Long distance Call (iPECS-MG, CM)**
“ ss…sxx…x” in the lpszDestAddress field where ss…s is the Outside Access and the following digits are real dialing number.

LG-Ericsson TSP ignores the value in the dwCountryCode field. Also, the following four special functions are supported:

- **Station Speed Dial (ipLDK, iPECS-LIK)**
“ SPD/xx…x” in the lpszDestAddress field where xx…x is:
 1. “ Cyyyzzz” or “ @yyyzzz” where yyy is CO number and zzz is speed dial number.
 2. “ Gyyyzzz” or “ \$yyyzzz” where yyy is CO group number and zzz is speed dial number.
 3. “ zzz” where zzz is speed dial number.(000 ~ 099)
- **Station Speed Dial (iPECS-MG, CM)**
“ SPD/xxx” in the lpszDestAddress field where xxx is:
 1. “ xxx” where xxx is speed dial number.(000 ~ 099)
- **System Speed Dial (ipLDK, iPECS-LIK)**
“ SPD/xx” in the lpszDestAddress field where x is:
 - 1 “ Cyyyzzzz” or “ @yyyzzzz” where yyy is CO line number and zzzz is system speed dial number.
 2. yyzzzz” or “ \$yyyzzzz” where yyy is CO group number and zzzz is system speed dial number.
 3. “ zzzz” where zzzz is system speed dial number.
- **System Speed Dial (iPECS-MG, CM)**
“ SPD/xxxx” in the lpszDestAddress field where x is:
 1. “ xxxx” where xxxx is system speed dial number.
- **Last Number Redial(LNR) (ipLDK, iPECS-LIK)**
“ LNR/xx…x” in the lpszDestAddress field where x is:
 1. “ Cyyy” or “ @yyy” where yyy is CO line number.
 2. “ Gyyy” or “ \$yyy” where yyy is CO group number.
 3. (None)
- **Last Number Redial(LNR) (iPECS-MG, CM)**
“ LNR” in the lpszDestAddress field

- **Save Number Redial(SNR) (ipLDK, iPECS-LIK)**
“ SNR/xx...x” in the IpszDestAddress field where x is:
 1. “ Cyyy” or “ @yyy” where yyy is CO line number.
 2. “ Gyyy” or “ \$yyy” where yyy is CO group number.
 3. (None)
- **Save Number Redial(SNR) (iPECS-MG, CM)**
“ SNR” in the IpszDestAddress field
- **Make a call to a Conference Room (ipLDK, iPECS-LIK)**
“ xxx/yyyy” in the IpszDestAddress field where x is:
 1. “ xxx” is a Conference Room number.
 2. “ yyyy” is a password.
- **Make a call to a Conference Room (iPECS-MG, CM)**
“ xxxyyyyy*” in the IpszDestAddress field where x is:
 1. “ xxx” is a Conference Room number.
 2. “ yyyy” is a password.
 3. “ *”

lineNegotiateAPIVersion

The `lineNegotiateAPIVersion` function allows an application to negotiate an API version to use.

```
LONG lineNegotiateAPIVersion(  
    HLINEAPP hLineApp,  
    DWORD dwDeviceID,  
    DWORD dwAPILowVersion,  
    DWORD dwAPIHighVersion,  
    LPDWORD lpdwAPIVersion,  
    LPLINEEXTENSIONID lpExtensionID  
);
```

The negotiated API version number of LG-Ericsson TSP with the pointer `lpdwAPIVersion` is

Low Version: 0x00010004

High Version: 0x00020001

The extension identifiers of LG-Ericsson TSP in the structure pointed by `lpExtensionID` are

`lpExtensionID->dwExtensionID0`: 0x0ccb18c0

`lpExtensionID->dwExtensionID1`: 0x10202109

`lpExtensionID->dwExtensionID2`: 0x80002f8d

`lpExtensionID->dwExtensionID3`: 0xf354241e

lineNegotiateExtVersion

The **lineNegotiateExtVersion** function allows an application to negotiate an extension version to use with the specified line device. This operation need not be called if the application does not support extensions.

```
LONG lineNegotiateExtVersion(  
    HLINEAPP hLineApp,  
    DWORD dwDeviceID,  
    DWORD dwAPIVersion,  
    DWORD dwExtLowVersion,  
    DWORD dwExtHighVersion,  
    LPDWORD lpdwExtVersion  
);
```

The negotiated extension version of LG-Ericsson TSP with the pointer *lpdwExtVersion* is
Low Version: 0x00020001
High Version: 0x00020001

linePark

The **linePark** function parks the specified call according to the specified park mode. The function is completed asynchronously.

```
LONG linePark(  
    HCALL hCall,  
    DWORD dwParkMode,  
    LPCSTR lpszDirAddress,  
    LPVARSTRING lpNonDirAddress  
);
```

LINEPARKMODE_NONDIRECTED in the field *dwParkMode* is applied only in 3rd party mode.

- Parking Area
 - ipLDK, iPECS-LIK: Admin dependent
 - iPECS-MG: 00 ~ 49
 - iPECS-CM: 000 ~ 999

lineRedirect

The **lineRedirect** function redirects the specified offering call to the specified destination address.

```
LONG lineRedirect(  
    HCALL hCall,  
    LPCSTR lpszDestAddress  
    DWORD dwCountryCode  
);
```

If the offering call is external call, LG-Ericsson TSP can support only the redirection of DID call.

lineSetStatusMessages

The **lineSetStatusMessages** function enables an application to specify which notification

messages to receive for events related to status changes for the specified line or any of its addresses.

```
LONG lineSetStatusMessages(  
    HLINE hLine,  
    DWORD dwLineStates,  
    DWORD dwAddressStates  
);
```

If this function is executed, you will receive the following messages:

- The number of Message Wait.
- The number of voice message
- Forward information
- The range of conference room (IP LDK or later version)

8.2 Phone Device Functions

The TAPI phone-device class functions supported by LG-Ericsson TSP are described in the following table:

Function	LG-Ericsson TSP Support
phoneClose	Supported.
phoneDevSpecific	Supported.
phoneGetData	Supported.
phoneGetDevCaps	Supported.
phoneGetID	Supported.
phoneInitializeEx	Supported.
phoneNegotiateAPIVersion	Supported.
phoneNegotiateExtVersion	Supported.
phoneOpen	Supported.
phoneShutdown	Supported.

phoneDevSpecific

The **phoneDevSpecific** function is used as a general extension mechanism to enable a Telephony API implementation to provide features not described in the other TAPI functions. The meanings of these extensions are device specific.

```

LONG phoneDevSpecific(
    HPHONE hPhone,
    LPVOID lpParams,
    DWORD dwSize
);
    
```

LG-Ericsson TSP supports the following device-specific functions:

- **Wake-Up**
 - “ WU/xx···x” in the lpParams field where xx···x is:
 1. HHMM (HH:hour, MM:minute)
 2. HHMM/S (S:once)
 3. HHMM/C (C:continuous)
 4. HHMM/T (T: Tomorrow, iPECS-MG Only)
 5. CURR (current): to get current wake up time. You will get the “ none” string if current wake up time does not be set.
 6. DELE (delete): to delete current wake up time.
- **Authorization Code/Password**
 - “ ACP/xx···x” in the lpParams field where xx···x is:
 1. yyyyy/zzzzz (yyyyy : old password, zzzzz : new password) where each y and z is 0 through 9,*, and #. (ipLDK, iPECS-LIK)
 2. NEWPW/yyyyy (yyyyy : new password) where y is 0 through 9,*, and #.
 3. CURPW: to get current password. If there is no current password, system returns

“ NOPAS.”

4. DELPW: to delete current password. (iPECS–MG, CM)

- **Temporal Station COS Change**

“ TSCC/xx···x” in the IpParams field where xx···x is:

1. C (current)
2. D (down, ipLDK, iPECS–LIK)
3. D/yyyy, (down, iPECS–MG, iPECS–CM, yyyy is a password)
4. R/yyyy (restore, yyyy is a password)

- **Preselected Message Program**

“ PMP/xx···x” in the IpParams field where xx···x is:

1. A message string that can contain alphabet, :, (,), 0 through 9, or space character within 24 letters.
2. /CUR (current message), PMP//CUR
3. /DEL (delete message), PMP//DEL

- **ICM Answer Mode**

“ IAM/x” in the IpParams field where x is:

1. H (hands free mode)
2. T (tone ring mode)
3. P (privacy mode)
4. C (current)

- **BGM Assignment (ipLDK, iPECS–LIK, MG)**

“ BGM/xx” in the IpParams field where x is:

1. 00 (No use)
2. 01 (BGM Channel 1)
3. 02 (BGM Channel 2)
4. 03 (BGM Channel 3)
5. 04 (BGM Channel 4)
6. 05 (BGM Channel 5)
7. 06 (BGM Channel 6)
8. 07 (BGM Channel 7)
9. 08 (BGM Channel 8)
10. 09 (BGM Channel 9)
11. 10 (BGM Channel 10)
12. 11 (BGM Channel 11)
13. 12 (BGM Channel 12)
14. Cu(Current BGM Channel)

- **Preselected Message Selection**

“ PMS/mm/xx···x” in the IpParams field where mm is:

1. 00: Display preselected message programmed in each station. “ /xx···x” must not be set.
2. 01: Display “ LUNCH / RETURN AT hh:mm” where xx···x is hhmm.

3. 02: Display “ ON VACATION / RETURN AT dd mon” where xx···x is ddmm.
 4. 03: Display “ OUT OF OFFICE / RETURN AT hh:mm” where xx···x is hhmm.
 5. 04: Display “ OUT OF OFFICE / RETURN AT dd mon” where xx···x is mmdd.
 6. 05: Display “ OUT OF OFFICE / RETURN UNKNOWN” where /xx···x must not be set.
 7. 06: Display “ CALL : telephone number” where xx···x is telephone number (Max: 18 digits).
 8. 07: Display “ IN OFFICE : STA ssss” where xx···x is ssss.
 9. 08: Display “ IN A MEETING / RETURN TIME hh:mm” where xx···x is hhmm.
 10. 09: Display “ AT HOME.” “ /xx···x” must not be set.
 11. 10: Display “ AT BRANCH OFFICE” where /xx···x must not be set.
 12. 11 – 20: Display preselected messages programmed in attendant. (ipLDK, iPECS-LIK Only)
 13. 21: Current preselected message where /xx···x must not be set.
 14. 99: Unset current preselected message.
- **Differential Ring** (Digital Keypad Only, ipLDK, iPECS-LIK)
“ DR/x” in the IpParams field where x is:
 1. 1 ~ 4 (Ring Type)
 2. 0 (Current Ring Type)
 - **LCD Language Mode (ipLDK, iPECS-LIK)**
“ LLM/x” in the IpParams field where x is:
 1. 0 (English)
 2. 1 (Corresponding Country)
 3. 2 (Current)
 - **LCD Language Mode (iPECS-MG, CM)**
“ LLM/xx” in the IpParams field where x is:
 1. 00 (English)
 2. 01 (Italian)
 3. 02 (Finnish)
 4. 03 (Dutch)
 5. 04 (Swedish)
 6. 05 (Danish)
 7. 06 (Norwegian)
 8. 07 (Hebrew)
 9. 08 (German)
 10. 09 (French)
 11. 10 (Portuguese)
 12. 11 (Spanish)
 13. 12 (Korean)
 14. 13 (Estonian)

15. 14 (Russian)
 16. 15 (Turkish) (iPECS-CM only)
 17. 16 (Polish) (iPECS-CM only)
 18. 17 (Greek) (iPECS-CM only)
 19. 99 (Current)
- **Headset Mode Program (ipLDK, iPECS-LIK)**
“ HMP/x” in the IpParams field where x is:
 1. 0 (Headset mode off)
 2. 1 (Headset mode on)
 3. 2 (Current)
 - **Headset Mode Program (iPECS-MG, CM)**
“ HMP/x” in the IpParams field where x is:
 1. 0 (Speaker)
 2. 1 (Headset)
 3. 2 (Ear Mic)
 4. 3 (Bluetooth)
 5. 4 (Current)

phoneGetData

The **phoneGetData** function uploads the information from the specified location in the open phone device to the specified buffer.

```
LONG phoneGetData(  
    HPHONE hPhone,  
    DWORD dwDataID,  
    LPVOID lpData,  
    DWORD dwSize  
);
```

LG-Ericsson TSP supports the following functions:

- **Wake-Up**
“ 0x01” in the dwDataID field
The lpData field and its meaning are:
 1. DELET: No setting
 2. HHMMF where HH:hour, MM:minute, F: C(continuous)/S(single)
- **Authorization Code/Password**
“ 0x02” in the dwDataID field
The lpData field and its meaning are:
 1. NOPAS: No password
 2. xxxxx: Current password
- **Temporal Station COS Change**
“ 0x03” in the dwDataID field
The lpData field and its meaning are:
 1. D: COS Down
 2. R: COS Restored

- **Preselected Message Program**
“ 0x04” in the dwDataID field
The IpData field and its meaning are:
 1. xx…x: null terminated string
- **ICM Answer Mode**
“ 0x05” in the dwDataID field
The IpData field and its meaning are:
 1. H: hands free
 2. T: Tone ring
 3. P: Privacy
- **BGM Assignment**
“ 0x06” in the dwDataID field
The IpData field and its meaning are:
 1. 0: not in use
 2. x: channel no(1 or 2)
- **Preselected Message Selection**
“ 0x07” in the dwDataID field
The IpData field and its meaning are:
 1. /mm/xx…x where mm is message number and xx…x is the related string. Refer to **phoneDevSpecific** function
- **Differential Ring (Digital Keyphone Only, ipLDK, iPECS-LIK Only)**
“ 0x08” in the dwDataID field
The IpData field and its meaning are:
 1. x: ring type(1-4)
- **LCD Language Mode (ipLDK, iPECS-LIK)**
“ 0x09” in the dwDataID field
The IpData field and its meaning are:
 1. 0: English
 2. 1: Domestic
- **LCD Language Mode (iPECS-MG, CM)**
“ 0x09” in the dwDataID field
The IpData field and its meaning are:
 1. 00: English
 2. 01: Italian
 3. 02: Finnish
 4. 03: Dutch
 5. 04: Swedish
 6. 05: Danish
 7. 06: Norwegian
 8. 07: Hebrew
 9. 08: German
 10. 09: French
 11. 10: Portuguese
 12. 11: Spanish
 13. 12: Korean
 14. 13: Estonian

- 15. 14: Russian
- 16. 15: Turkish (iPECS-CM only)
- 17. 16: Polish (iPECS-CM only)
- 18. 17: Greek (iPECS-CM only)
- **Headset/Speakerphone Mode Program (ipLDK, iPECS-LIK)**
 - “ 0x0B” in the dwDataID field
 - The lpData field and its meaning are:
 - 1. 0: Speaker
 - 2. 1: Headset
- **Headset/Speakerphone Mode Program (iPECS-MG, CM)**
 - “ 0x0B” in the dwDataID field
 - The lpData field and its meaning are:
 - 1. 0: Speaker
 - 2. 1: Headset
 - 3. 2: Ear Mic
 - 4. 3: Bluetooth

phoneNegotiateAPIVersion

The **phoneNegotiateAPIVersion** allows an application to negotiate an API version to use for the specified phone device.

```
LONG phoneNegotiateAPIVersion(  
    HPHONEAPP hPhoneApp,  
    DWORD dwDeviceID,  
    DWORD dwAPILowVersion,  
    DWORD dwAPIHighVersion,  
    LPDWORD lpdwAPIVersion,  
    LPPHONEEXTENSIONID lpExtensionID  
);
```

The negotiated API version number of LG-Ericsson TSP with the pointer lpdwAPIVersion is

Low Version: 0x00010004
High Version: 0x00020001

The extension identifiers of LG-Ericsson TSP in the structure pointed by lpExtensionID are

lpExtensionID->dwExtensionID0: 0x7bdc3120
lpExtensionID->dwExtensionID1: 0x10204a78
lpExtensionID->dwExtensionID2: 0x8000318d
lpExtensionID->dwExtensionID3: 0xf354241e

phoneNegotiateExtVersion

The **phoneNegotiateExtVersion** function allows an application to negotiate an extension version to use with the specified phone device. This operation need not be called if the application does not support extensions.

```
LONG phoneNegotiateExtVersion(  
    HPHONEAPP hPhoneApp,  
    DWORD dwDeviceID,  
    DWORD dwAPIVersion,  
    DWORD dwExtLowVersion,  
    DWORD dwExtHighVersion,  
    LPDWORD lpdwExtVersion  
);
```

The negotiated extension version of LG-Ericsson TSP with the pointer lpdwExtVersion is
Low Version: 0x00020001
High Version: 0x00020001

8.3 Device Specific Messages

LINE_DEVSPECIFIC

The LINE_DEVSPECIFIC message is sent to notify the application about device-specific events occurring on a line, address, or call. The meaning of the message and the interpretation of the parameters are described below.

```

LINE_DEVSPECIFIC
dwDevice = (DWORD) hLineOrCall;
dwCallbackInstance = (DWORD) hCallback;
dwParam1 = (DWORD) DeviceSpecific1;
dwParam2 = (DWORD) DeviceSpecific2;
dwParam3 = (DWORD) DeviceSpecific3;
    
```

LG-Ericsson TSP sends this message to application to notify the following events:

- **SMDR, All Station Status, All CO Line Status have received.** (Refer to `lineDevSpecific` function)
 - hLine in the dwDevice field,
 - “ 0x01” in the dwParam1 field.
 1. SMDR data is received.
 - “ 0x01” in the dwParam2 field.
 2. All Station Status data is received.
 - “ 0x04” in the dwParam2 field.
 3. All CO Line Status data is received.
 - “ 0x05” in the dwParam2 field.
 4. All Station Numbers are received..
 - “ 0x08” in the dwParam2 field.
 5. Station Information is received.
 - “ 0x09” in the dwParam2 field.
 6. CO line Information is received.
 - “ 0x0A” in the dwParam2 field.
 7. All Park Numbers are received.
 - “ 0x0B” in the dwParam2 field.
 8. CO Call IDs are received.
 - “ 0x10” in the dwParam2 field.

After receiving this message, the application can get the data using `lineGetAddressStatus` function.

Note: 3rd party mode only

- **The UserUserInfo data have been accumulated over 2.**
 - hCall in the dwDevice field,
 - “ 0x02” in the dwParam1 field,
 - “ xx” in the dwParam2 field where xx is the number of accumulated `UserUserInfo`

data.

- **The response of “ Get System Time” in lineDevSpecific function has received.**
hLine in the dwDevice field,
“ 0x03” in the dwParam1 field,
“ yyyyymmm” in the dwParam2 field where yyyy is year, mmmm is month,
“ ddhhmmss” in the dwParam2 field where dd is date, hh is hour, mm is minute, ss is second.

- **The MSGWait (ICM number) has received.**
hLine in the dwDevice field,
“ 0x04” in the dwParam1 field,
“ x” in the dwParam2 field where x is 0x01(ON) or 0x00(OFF),
“ y” in the dwParam3 field where y is the station number which leave the waiting message (DWORD).

- **DVU MSG has received.**
hLine in the dwDevice field,
“ 0x05” in the dwParam1 field,
“ 0x01” in the dwParam2 field,
“ x” in the dwParam3 field where x is received DVU message number.

- **DND state has changed.**
hLine in the dwDevice field,
“ 0x06” in the dwParam1 field,
“ 0x01” in the dwParam2 field,
“ x” in the dwParam3 field where x is 0x01(ON) or 0x00(OFF).

- **The station’ s state has changed to DVU Forwarded.**
hLine in the dwDevice field,
“ 0x06” in the dwParam1 field,
“ 0x02” in the dwParam2 field.

- **Station number related to physical number is sent.**
hLine in the dwDevice field,
“ 0x07” in the dwParam1 field,
“ x” in the dwParam2 field where x is the physical number of the station in DWORD, which has described in **lineDevSpecific** function,
“ y” in the dwParam3 field where y is the station number of the station, x, in 4-byte characters.
Note: 3rd party mode only

- **Station Status has changed.**
hLine in the dwDevice field,
“ 0x08” in the dwParam1 field,
“ x” in the dwParam2 field where x is the physical number of the station in DWORD,

“ y” in the dwParam3 field where y is the changed status of the station. (Status is described in 0 Device Specific Data Format)

Note: 3rd party mode only

- **CO Line Status has changed.**

hLine in the dwDevice field,

“ 0x09” in the dwParam1 field,

“ x” in the dwParam2 field where x is the physical number of the CO line in DWORD,

“ y” in the dwParam3 field where y is the changed status of the CO line. (Status is described in 0 Device Specific Data Format)

Note: 3rd party mode only

- **My Station Status has changed.**(Opened line’ s status has changed)

hLine in the dwDevice field,

“ 0x0B” in the dwParam1 field,

“ x” in the dwParam2 field where x is the changed status of my station in DWORD, (Status is described in 0 Device Specific Data Format)

Note: 3rd party mode only

- **Wake up ring**

hLine in the dwDevice field,

“ 0x10” in the dwParam1 field,

“ x” in the dwParam2 field where x is 0x01(Ring) or 0x00(Stop),

- **Linked Pair**

hLine in the dwDevice field,

“ 0x11” in the dwParam1 field,

“ x” in the dwParam2 field where x is 0x01(Slave is in use) or 0x00(Stop),

Note: 1. The master receives CTI Message, but the slave doesn’ t.

2. When the slave is in use, the master can’ t use CTI Functions

- **Park Number**

hLine in the dwDevice field,

“ 0x12” in the dwParam1 field,

“ x” in the dwParam2 field where x is the Park number.

“ y” in the dwParam3 field where y is the CO line.

- **Station number has changed**

hLine in the dwDevice field,

“ 0x36” in the dwParam1 field,

“ x” in the dwParam2 field where x is the Port Number

“ y” in the dwParam3 field where y is the Changed Station number

Ex) If the changed station number is 100,

ipLDK and iPECS-LIK contain 0x20 0x31 0x30 0x30 in dwParam3.

iPECS-MG contains 0x00 0x00 0x00, 0x64 in dwParam3.

- **Range of Conference Room**
hLine in the dwDevice field,
“ 0x37” in the dwParam1 field,
“ x” in the dwParam2 field where x is the Start Number
“ y” in the dwParam3 field where y is the Last number

- **Dummy Station**
hLine in the dwDevice field,
“ 0x38” in the dwParam1 field,
“ x” in the dwParam2 field where x is 0x00(Normal Keyset) or 0x01(Dummy Keyset).
“ y” in the dwParam3 field where y is 0x00(Logon State) or 0x01(Dummy State).

- **UCD DND has changed**
hLine in the dwDevice field,
“ 0x39” in the dwParam1 field,
“ x” in the dwParam2 field where x is 0x00(OFF) or 0x01(ON).
“ y” in the dwParam3 field where x is a UCD group number.

- **Get CO Call ID & DID Number (When you call lineDevSpecific(“ COL_INFO/xxx”))**
hLine in the dwDevice field,
“ 0x40” in the dwParam1 field,
“ x” in the dwParam2 field where x is a call ID.
“ y” in the dwParam3 field where x is a DID number.

- **The Keyset has restarted**
hLine in the dwDevice field,
“ 0xFE” in the dwParam1 field,
“ 0x01” in the dwParam2 field.

- **The Keyset line has been disconnected**
hLine in the dwDevice field,
“ 0xFE” in the dwParam1 field,
“ 0x03” in the dwParam2 field.

Device Specific Data Format

If an application requests SMDR, All Station Status, All CO Line Status for the line device using **lineDevSpecific** function, LG-Ericsson TSP gathers the data and sends the application message of each data. Then, the application can obtain the data using **lineGetAddressStatus**. In the LINEADDRESSSTATUS structure of the function, LG-Ericsson TSP fills dwDevSpecificSize, dwDevSpecificOffset, and attaches the corresponding data, which is represented as following. (Refer to **lineGetAddressStatus** in this document and in *Microsoft Platform SDK*)

- SMDR Data Format

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
S	M	D	R	_	D	A	T	A	Nu	Nu	Nu	Nu	Nu	Total size			
FrameNum0				FrameSize0				FrameData0									
FrameData0(unfixed size)																	
FrameNum1				FrameSize1				FrameData1									
FrameData1(unfixed size)																	

- SMDR_DATA : ascii string, “ SMDR_DATA” (9 bytes)
- Nu : NULL character
- TotalSize : the total size of SMDR DATA format (4 bytes)
- FrameNum : the number of FrameData (4 bytes)
- FrameSize : the size of FrameData (4 bytes)
- FrameData : SMDR data (unfixed size). Refer to the following table

Field Name	No. of bytes	Descriptions
Sequential number	4	Sequential number (range 0000 ~ 9999)
Space	1	
Station	5	Station number (2, 3, or 4 digits) CO number (CO xxx)
Space	1	
CO	3	CO Line number
Time	8	Call time serviced, 01:10:05(HH:MM:SS)
Space	1	
Start time	14	Start time, 25/11/01 14:20
Space	1	
Record type	1	t : Incoming CO transfer I : incoming CO (answered) O : outgoing CO T : outgoing CO transfer H : hold lost R : ring lost G : Group call lost
Dialed digits	18	Dialed digits (string)
Space	2	
Account group	2	Account Group Number field.
Space	1	
Metering count	5	Call metering count (record type : O, T)
Space	1	
Call cost	11	Call Cost (record type : O, T)
Space	1	
Account code	12	Account code field.

● Station Status Data Format

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
S	T	A	_	S	T	A	T	U	S	Nu	Nu	Total size			
Frame0			Frame1			Frame2			...						
...															

- STA_STATUS : ascii string, " STA_STATUS" (10 bytes)
- Nu : NULL character
- Total size : total size of Station Status Data Format in byte (4 bytes)
- Frame0, Frame1, ... Frame_{Max} : All Station Status Data frame (3 bytes)

0 - 1	2
X	Y

X : physical number of station (physical number is order of connection of the station to the system)

Y : one of the following status values

	Status	Hexa value
Station Status	ST_INVALID	0x01
	ST_SLAVE	0x02
	ST_HOLD	0x11
	ST_RING	0x12
	STEXT_IDLE	0x40
	STEXT_IDLE_WITH_DND	0x41
	STEXT_ICM	0x43
	STEXT_COL	0x44
	STEXT_PGM	0x45
ST_BUSY	0x10	

● CO Line Status Data Format

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
C	O	L	_	S	T	A	T	U	S	Nu	Nu	Total size			
Frame0			Frame1			Frame2			...						
...															

- COL_STATUS : ascii string, “ COL_STATUS” (10 bytes)
- Nu : NULL character
- Total size : total size of CO Line Status Data Format in byte (4 bytes)
- Frame0, Frame1, ... Frame_{Max} : All CO Line Status Data frame (3 bytes)

0 - 1	2
X	Y

X : physical number of CO line (physical number is order of connection of the CO line to system)

Y : one of the following status values

	Status	Hexa value
CO Line Status	ST_INVALID	0x01
	ST_HOLD	0x11
	ST_RING	0x12
	STTRK_IDLE	0x80
	STTRK_HOLD_RECALL	0x81
	STTRK_HOLD_ATDRECALL	0x82
	STTRK_IDLE_WITH_DISABLE	Not Support
ST_BUSY	0x10	

● All Station' s Logical Number Data Format (ipLDK, iPECS-LIK 4digit)

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
S	T	A	_	N	U	M	B	E	R	Nu	Nu	Total Size			
Nu ₀			Nu ₁			Nu ₂			...						
...										Nu _n					

- STA_NUMBER : ascii string, “ STA_NUMBER” (10 bytes)
- Nu : NULL character

- Total size : total size of All Station' s Logical Number Data Format in bytes (4 bytes)
- Nu₀ : logical(assigned internal) number of the first station in integer(2 byte)
- Nu₁ : logical(assigned internal) number of the second station in integer(2 byte)
- Nu_n : logical(assigned internal) number of the n th station in integer(2 byte)

● All Station' s Logical Number Data Format (iPECS–MG, CM, iPECS–LIK 8 digit)

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
S	T	A	_	N	U	M	B	E	R	Nu	Nu	Total Size			
Nu ₀				Nu ₁				Nu ₂				...			
...										Nu _n					

- STA_NUMBER : ascii string, “ STA_NUMBER” (10 bytes)
- Nu : NULL character
- Total size : total size of All Station' s Logical Number Data Format in bytes (4 bytes)
- Nu₀ : logical(assigned internal) number of the first station in integer(4 byte)
- Nu₁ : logical(assigned internal) number of the second station in integer(4 byte)
- Nu_n : logical(assigned internal) number of the n th station in integer(4 byte)

● Station Information Data Format (ipLDK, iPECS–LIK)

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
S	T	A	_	I	N	F	O	Nu	Nu	Nu	Nu	Total Size			
Pn	Sta Number				Sl	St	At	Ap		Ns	Sta Name ~				

- STA_INFO : ascii string, “ STA_INFO” (8 bytes)
- Nu : NULL character
- Total size : total size of Station Information Data Format in byte (4 bytes)
- Pn : physical number of the station (2 byte)
- Sta Number : the number of the station in DWORD (4–byte integer)
(ex> 0x00000064 : station 100)
- Sl : slot number of the station in system (1 byte)
- St : status of the station. Refer to the Station Status value (1 byte)
- At : type of the associated device (1 byte)
 - 0x01 : the station is connected to a station
 - 0x02 : the station is connected to a CO line
 - 0x00/0xFF : the station is not connected
- Ap : physical number of the associated device (2 byte)
(ex> At = 0x02, Ap = 0x0001 : the station is now using CO line 01)
- Ns : size of the station' s name (1 byte)
- Sta Name : name of the station (size of Ns)

● CO Line Information Data Format

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
C	O	L	_	I	N	F	O	Nu	Nu	Nu	Nu	Total Size			
Pn	St	At	Ap	Ns	Cs	CO Name									
CallerID															

- COL_INFO : ascii string, “ COL_INFO” (8 bytes)
- Nu : NULL character
- Total size : total size of CO Line Information Data Format in byte (4 bytes)
- Pn : physical number of the CO line (2 byte)
- St : status of the CO line. Refer to the CO Line Status value (1 byte)
- At : type of the associated device (1 byte)
 - 0x01 : the CO line is connected to a station
 - 0x02 : the CO line is connected to a CO line
 - 0x00/0xFF : the station is not connected
- Ap : physical number of the associated device (2 byte)
(ex> At = 0x01, Ap = 0x0001 : the CO line is used by first station)
- Ns : size of the CO line name (1 byte)
- Cs : size of the CallerID of the CO line (1 byte)
- CO Name : name of the CO line (size of Ns)
- CallerID : CallerID of the CO line (size of Cs)

● All Park Number Data Format (ipLDK, iPECS-LIK)

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
A	L	L	_	P	A	R	K	_	N	U	M	Total Size			
Nu ₀				Nu ₁				Nu ₂				...			
...								Nu _n							

- ALL_PARK_NUM : ascii string, “ ALL_PARK_NUM” (12 bytes)
- Total size : total size of ALL Park Number Data Format in byte (4 bytes)
- Nu₀ : The first park number(4 byte)
- Nu₁ : The second park number(4 byte)
- Nu₂ : The third park number(4 byte)

● All Park Number Data Format (iPECS-MG)

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
A	L	L	_	P	A	R	K	_	N	U	M	Total Size			
Nu ₀		Nu ₁		Nu ₂								...			
...								Nu _n							

- ALL_PARK_NUM : ascii string, “ ALL_PARK_NUM” (12 bytes)
- Total size : total size of ALL Park Number Data Format in byte (4 bytes)
- Nu₀ : The first park number(2 byte)
- Nu₁ : The second park number(2 byte)

- Nu₂ : The third park number(2 byte)

- Co Call ID Data Format (ipLDK, iPECS-LIK)

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
C	O	L	_	C	A	L	L	_	I	D	Nu	Total Size			
ACD				Nc	Cn1	Cn2	Cn3	Cn4	...						

- COL_CALL_ID : ascii string, “ COL_CALL_ID” (11 bytes)
- Nu : NULL character
- Total size : total size of Co Call ID Data Format in byte (4 bytes)
- ACD : ACD group number (4 byte)
- Nc: The number of Call IDs (1 byte)
- Cn₁ : The first Call ID (2 byte)
- Cn₂ : The second Call ID (2 byte)

9. Troubleshooting

- Lines and phones can not be seen on the server with the **tapimgmt.msc** command

Cause: The connection between LG-Ericsson system and LG-Ericsson TSP does not work correctly.

Solution: Ensure the following:

- 3rd party lock key is set up correctly.
- After installing LG-Ericsson TSP, you should restart your computer.
- Ensure the LG-Ericsson TSP configurations.

- One or more client computers cannot see the telephony server.

Cause: The server cannot be reached on the network because it is not set up correctly.

Solution: Ensure the following:

- The client computers can successfully log on to a domain.
- The client computers can successfully see the server with the **ping** command.
- That the telephony server has been configured correctly.

- Client computers cannot see lines on the telephony server.

Cause: The telephony server has not been set up correctly, or users have not been authorized to access lines on the server.

Solution: When a TAPI-based program accesses lines on the telephony server, the user who is running the program process is first authenticated. For the user to see the lines, they must have been assigned to the user. Ensure that the server has been set up correctly and that the user is assigned lines on the server.

- A client user cannot see lines or phones on the telephony server even though the server is set up correctly and the lines or phones have been assigned to the user.

Cause: The client computer has not been enabled to use the telephony server.

Solution: Use **tcmsetup** on the client computer to specify the telephony server.

- A client user cannot see a new line on the telephony server, even though the server administrator has assigned the user to the line.

Cause: When you assign a currently running client user to a line on the telephony server, the new settings will not be available until the user restarts the telephony service on the client computer.

Solution: Stop all client TAPI applications on the client so that the telephony service will shut down. When the client applications restart, they will be able to see the newly allocated lines. If you cannot get TAPI to shut down, restart the client computer.

- A client logon ID must be used in English and digits.
- Edit the lmhosts.sam – No response or Long delay time between the TAPI server and a client.

If a subnet of client computer IP address and a subnet of TAPI server IP address are different, it takes long time to get the TAPI information between the TAPI server and a client.

The lmhosts.sam file is a static file that assists with remote NetBIOS name resolution on computers that cannot respond to NetBIOS name-query broadcasts. It contains NetBIOS name-to-IP addresses mappings.

To edit the lmhosts.sam


1. Open lmhosts.sam

Typically, the lmhosts file is stored in the systemroot\System32\Drivers\Etc folder.


2. Add NetBIOS name-to-IP Address
3. Save the file.

To configure TCP/IP to use WINS


1. Open **Network and Dial-up Connections**

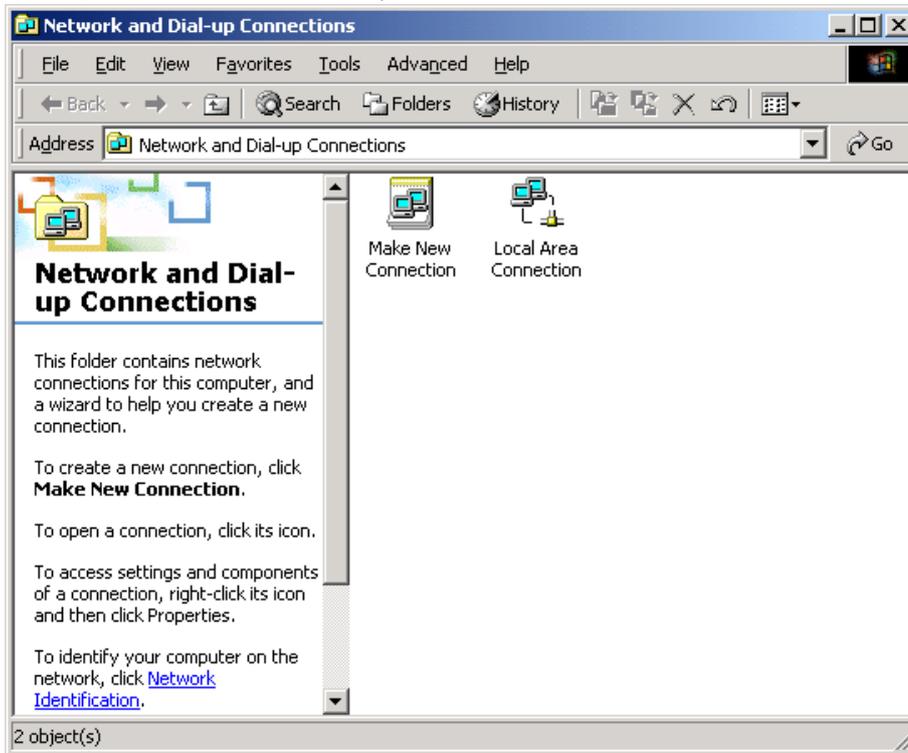


2. Right-click the network connection you want to configure, and then click **Properties**.

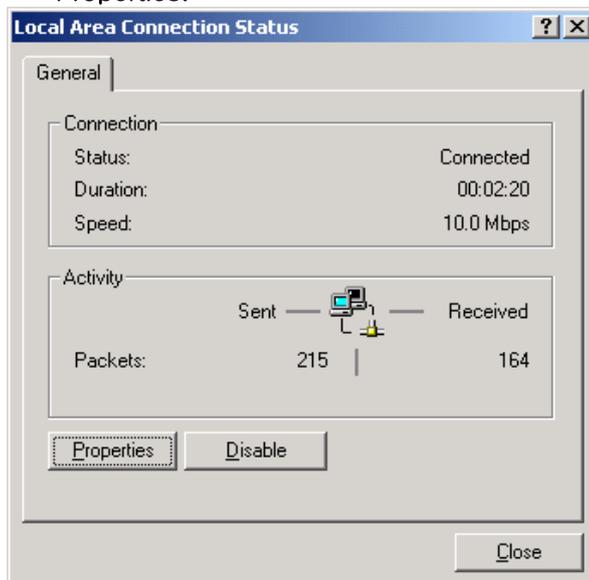

3. On the **General** tab (for a local area connection) or the **Networking** tab (all other connections), click **Internet Protocol (TCP/IP)**, and then click **Properties**.

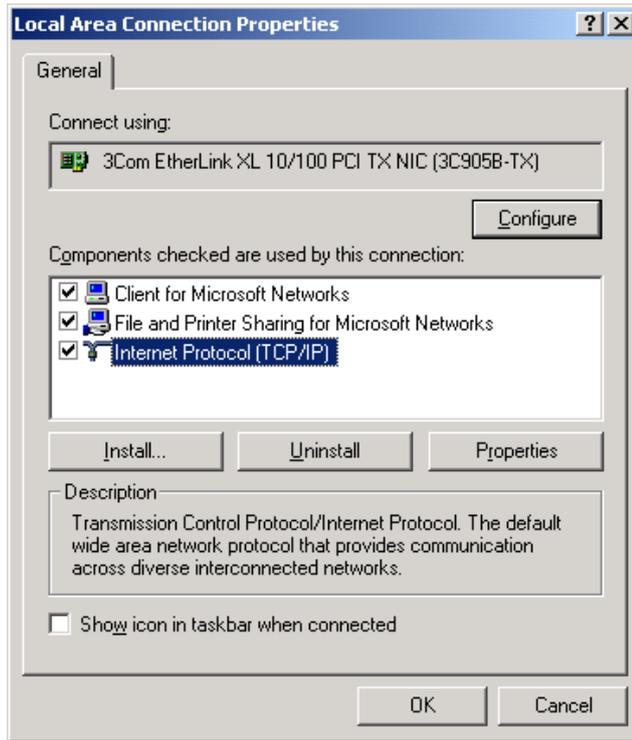

4. Click **Advanced**, click the **WINS** tab.

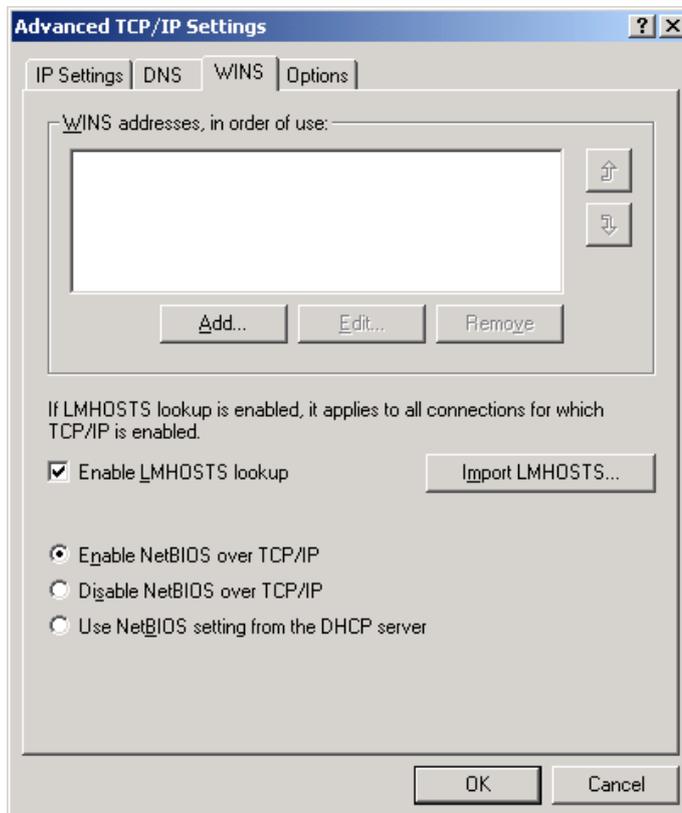

To enable the use of the `lmhosts` file to resolve remote NetBIOS names, select the **Enable LMHOSTS lookup** check box. This option is enabled by default.

To specify the location of the file that you want to import into the lmhosts file, click **Import LMHOSTS**, and select the file in the **Open** dialog box.